


DRYER

USER MANUAL

GTN 38240 GCW

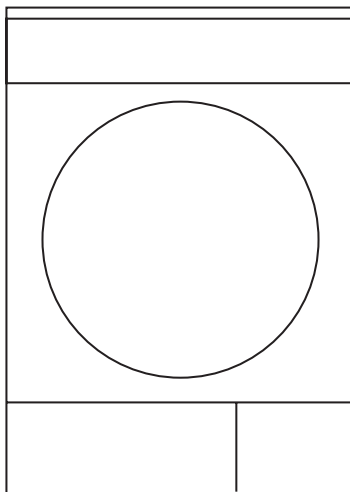

AUS GUTEM GRUND
GRUNDIG

Please read this user manual first!

Dear Customer,

Thank you for preferring an Grundig product. We hope that your product which has been manufactured with high quality and technology will give you the best results. We advise you to read through this manual and the other accompanying documentation carefully before using your product and keep it for future reference. If you transfer the product to someone else, give its manual as well. Pay attention to all details and warnings specified in the user manual and follow the instructions given therein.

Remember that this user manual is also applicable for several other models. Differences between models will be identified in the manual.

Explanation of symbols

Throughout this user manual the following symbols are used:

	Important information or useful hints about usage.
	Warning for hazardous situations with regard to life and property.
	Warning against electric shock.
	Warning against hot surfaces.
	Warning against fire hazard.
	Packaging of the product is made of recyclable materials pursuant to our national environment legislation.

Do not dispose of the packaging wastes with the domestic waste or other wastes, discard them to the dedicated collection points designated by the local authorities.

TABLE OF CONTENTS

1 Important instructions for safety and environment 4

1.1 General safety.	4
1.1.1 Electrical safety.	4
1.1.2 Product safety.	4
1.2 Intended use	5
1.3 Children's safety	5
1.4 Compliance with the WEEE Directive and Disposing of the Waste Product:	6
1.5 Compliance with RoHS Directive:	6
1.6 Package information	6

2 Your Dryer 7

2.1 Overview.	7
2.2 Scope of Delivery	8
2.3 Technical Specifications	9

3 Installation 10

3.1 Appropriate installation location	10
3.2 Removing the transportation safety assembly	10
3.3 Under counter installation	11
3.4 Mounting over a washing machine.	11
3.5 Connecting to the drain	11
3.6 Adjusting the feet	12
3.7 Transportation of the product.	12
3.8 Warnings related to sound.	12

4 Preparation 13

4.1 Laundry suitable for drying in the machine.	13
4.2 Laundry unsuitable for drying in the machine.	13
4.3 Preparing clothes to be dried.	13
4.4 Things to be done for energy saving . . .	14
4.5 First use	14
4.6 Correct load capacity	14
4.7 Loading the laundry	15

5 Operating the product 16

5.1 Control panel	16
5.2 Display Symbols.	16
5.3 Preparing the machine	17
5.4 Programme selection	17

5.5 Main programmes	17
5.6 Additional programmes	17
5.7 Auxiliary functions.	20
5.8 Warning symbols	20
5.9 Starting the programme	21
5.10 Child Lock	21
5.11 Changing the programme after it has started	21
5.12 Cancelling the programme.	22
5.13 End of programme	22

6 Easy use 23

6.1 Preparing the machine	23
6.2 Programme selection	23
6.3 Auxiliary functions.	23
6.4 Starting the programme	23
6.5 End of programme	23

7 Maintenance and cleaning 24

7.1 Lint Filter / Loading Door Inner Surface	24
7.2 Cleaning the sensors	25
7.3 Draining the water tank.	25
7.4 Cleaning the filter drawer	25
7.5 Cleaning the evaporator.	27

8 Troubleshooting 28

9 Electrical Connection 30

1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never place the product on a carpet-covered floor; otherwise, lack of airflow beneath the machine will cause electrical parts to overheat. This will cause problems with your product.
- Always have repair procedures carried out by an Authorised Service Agent.

1.1.1 Electrical safety

- If the product is faulty, it must not be operated unless it is repaired by an authorised service agent! There is the risk of electric shock!
- This product is designed to revert to the programme being used after recovery following a power cut. However, for safety reasons, the start button needs to be pressed to resume drying. If you want to cancel an ongoing programme, look at the section titled "Cancelling a Programme".
- Connect the product to an earthed outlet protected by a 10 ampere fuse. Have the grounding installation performed by a qualified electrician. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local

regulations.

- Unplug the product when it is not in use.
- Never wash the product by spreading or pouring water onto it! There is the risk of electric shock!
- Never touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Unplug the machine from the mains during installation, maintenance, cleaning and repair works.
- If the power cord of the machine is damaged, in order to avoid the danger, it should be replaced by the manufacturer, an after sales service agent or an equally qualified personnel (preferably an electrician).
- Do not use extension cords, multi-plugs or adaptors to connect the dryer to power supply in order to decrease the risk of fire and electric shock.
- Power cable plug must be within easy reach after installation.

1.1.2 Product safety

- Do not connect the air exit of the product to the chimney vents which are used for the exhaust fumes of devices operating with gas or other types of fuel.
- You must provide enough ventilation in order to prevent gases exiting from devices operating with other types of fuels including the naked flame from accumulating in the room.
- Items cleaned or washed with gasoline/ diesel, dry-laundry solvents and other combustible or explosive materials as well as the items that are contaminated or spotted with such materials should not be dried in the product since they emit flammable or explosive vapor.
- Do not dry the laundry cleaned with industrial chemicals in the dryer.
- Underwear that contains metal

Important instructions for safety and environment

reinforcements should not be dried in the dryer. Dryer can get damaged if metal reinforcements come loose and break off during drying.

- Do not reach into the machine when the drum is spinning.
- The final step of the drying programme, namely the cool-down step is performed without applying heat to ensure that the laundry items are kept at a temperature that will not damage them. If you open the loading door before the cool-down step completes, hot steam will come out.
- Never stop the dryer before the programme completes. If you must do this, remove all laundry quickly and lay them out to a suitable place to dissipate the heat.
- Always clean the lint filter before or after each load. Never operate the dryer without the lint filter installed.
- Clean inside and exhaust duct of the product regularly. Do not allow fiber, dust and dirt accumulation around the exhaust exit and at adjacent areas.
- Do not dry unwashed items in the dryer.
- Items soiled with cooking oils, acetone, alcohol, fuel oil, kerosene, stain removers, turpentine, paraffin and paraffin removers must be washed in hot water with plenty of detergent before being dried in the dryer.
- Garments or pillows bolstered with rubber foam (latex foam), shower bonnets, water resistant textiles, materials with rubber reinforcement and rubber foam pads should not be dried in the dryer.
- Do not use fabric softeners and anti-static products unless they are recommended by the manufacturers of the relevant product.
- Use softeners, anti-static products, etc. in accordance with the instructions of their manufacturers.
- Do not install the product behind a door with a lock, sliding door or a hinged door which can strike the product.
- Do not install or leave the dryer in places where it will be exposed to outdoor conditions.
- Your product can be operated at temperatures between +5 °C and +35 °C. If the operating conditions fall outside of this range, operation of the product will be adversely affected and it can get damaged.
- Remove the loading door of the drying compartment before decommissioning or disposing of the product.
- Check all garments before loading into the machine and make sure that there is no any lighters, coins, metal pieces, needles, and etc. in their pockets or on them.
- Make sure that the pets do not enter into the product. Check the drum of the product before using it.
- Do not lean on the loading door when it is open. The product may tip over.
- When your machine is not in use or when you unload the laundry after completion of drying process, the machine will be turned off automatic ally after 10 minutes.

1.2 Intended use

- This product has been designed for domestic use. It is not designed for commercial purposes and should not be used for other purposes.
- Use the product only for drying the textiles that are marked accordingly.
- Manufacturer denies any liability for the damages arising from misuse or faulty handling of the product.

1.3 Children's safety

- Packaging materials are dangerous to children. Keep packaging materials in a safe place out of the reach of the children.

Important instructions for safety and environment

- Electrical products are dangerous for the children. Keep children away from the product when it is operating. Do not let them tamper with the product. Activate the child-proof lock in order to prevent the children to tamper with the machine.
- Do not forget to close the loading door when leaving the room where the product is located.

1.4 Compliance with the WEEE Directive and Disposing of the Waste Product:



This product complies with EU WEEE Directive (2012/19/EU).

This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been

manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.5 Compliance with RoHS Directive:


- The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.6 Package information

- Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.


2 Your Dryer

2.1 Overview

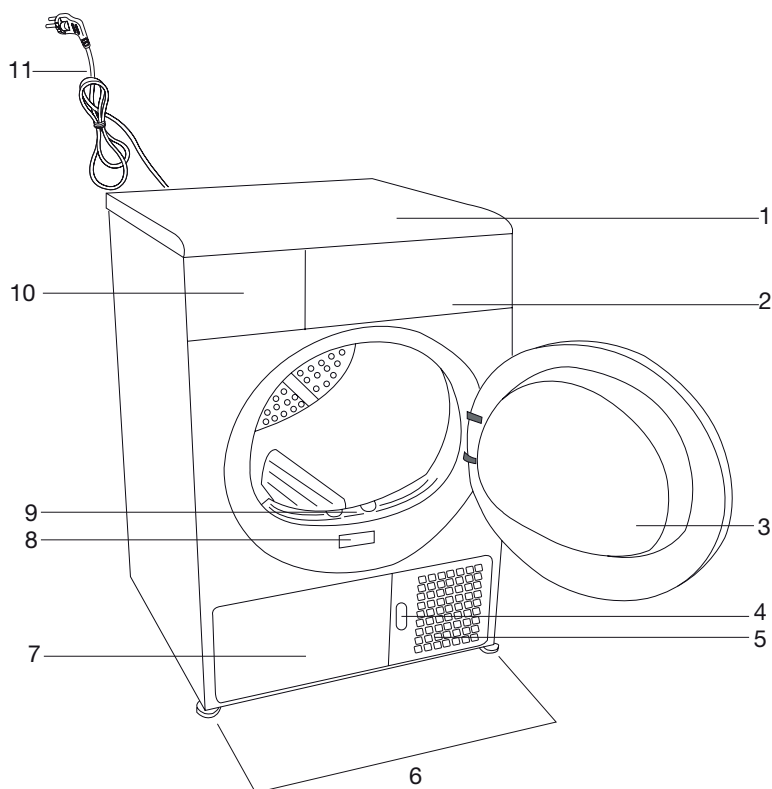

- 1. Top panel
- 2. Control panel
- 3. Loading door
- 4. Kick plate opening button
- 5. Ventilation grids
- 6. Adjustable feet
- 7. Kick plate
- 8. Type label
- 9. Lint filter
- 10. Water tank drawer
- 11. Power cord

2.2 Scope of Delivery

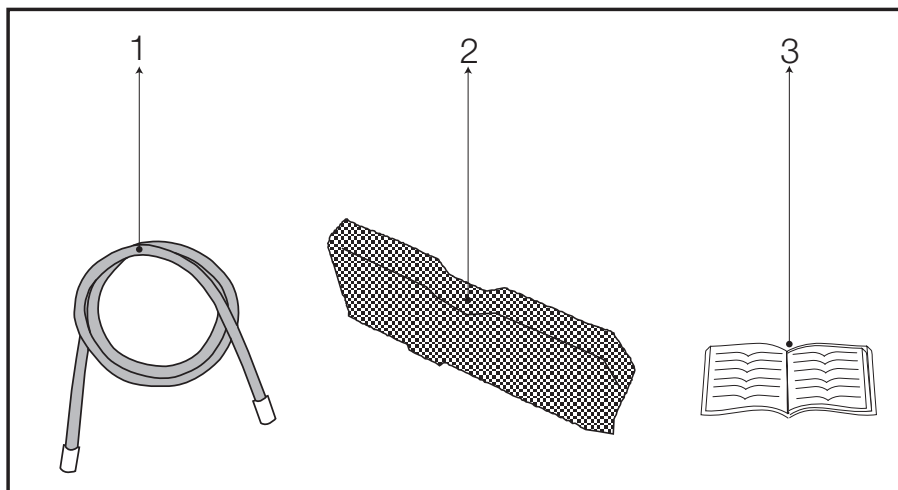

1. Water drain hose *

2. Filter drawer sponge *

3. User Manual

*It can be supplied with your machine depending on its model.

2.3 Technical Specifications

EN

Height (adjustable)	84,6 cm
Width	59,5 cm
Depth	59,8 cm
Capacity (max.)	8 kg
Net weight (plastic front door option)	49 kg
Net weight (glass front door option)	51 kg
Voltage	See type label
Rated power input	
Model code	

Type label is located behind the loading door.



Technical specifications of this appliance may be modified without notice to improve the quality of the product.



Figures in this manual are schematic and may not match the product exactly.



Values stated on the machine labels or in the documentation accompanying it are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the appliance, values may vary.

3 Installation

Refer to the nearest Authorised Service Agent for installation of the product. To make the product ready for use, make sure that the electricity and water drainage systems are appropriate by reading the information/ instructions given in the user manual before calling the Authorised Service Agent. If they are not, call a qualified technician and plumber to have any necessary arrangements carried out.



Preparation of the product's location as well as the electrical, clean water and waste water installations is under customer's responsibility.



CAUTION: Installation and electrical connections of the product must be performed by the Authorised Service Agent. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorised persons.



CAUTION: Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products cause risks for your safety.



CAUTION: Let your dryer wait for 12 hours before starting to use it.

3.1 Appropriate installation location

- Install the product on a stable and level surface.
- Dryer is heavy. Do not move it by yourself.
- Operate your product in a well ventilated, dust-free environment.
- Do not block the air ducts in front of and under the product with materials such as long pile rugs, or wooden plinths.
- Do not install the product behind a door with a lock, sliding door or a hinged door which can strike the product.
- Once the product is installed, it should stay at the same place where its

connections have been made. When installing the product, make sure that the rear wall of it does not touch anywhere (tap, socket, etc.). Also pay attention to select an installation location which you will not be required to change afterwards.

- Place the product at least 1.5 cm away from the edges of other furniture.




CAUTION: Do not place the product on top of the power cord.

3.2 Removing the transportation safety assembly



CAUTION: Remove the transportation safety assembly before using the product for the first time.

1. Open the loading door.
2. There is a nylon bag inside the drum that contains a piece of styrofoam. Hold it from its section marked with **XX XX**.
3. Pull the nylon towards yourself and remove the transportation safety assembly.

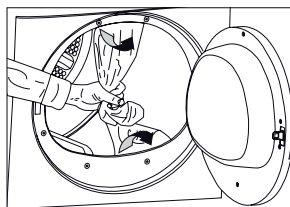

CAUTION: Check that no part of the transportation safety assembly remains inside the drum.

3.3 Under counter installation

- This product can be installed under a counter if the height of the counter is sufficient.
- Leave at least 3 cm of space around the sides and the rear wall of the product when installing it under a counter or in a cupboard.


3.4 Mounting over a washing machine

- A fixing device should be used between the two machines when installing the dryer above a washing machine.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the products on a solid floor that has sufficient load carrying capacity!

3.5 Connecting to the drain

In products equipped with condenser unit, water accumulates in the water tank during the drying cycle. You should drain accumulated water after each drying cycle.

You can directly drain accumulated water through the water drain hose supplied with the product instead of periodically draining the water collected in the water tank.

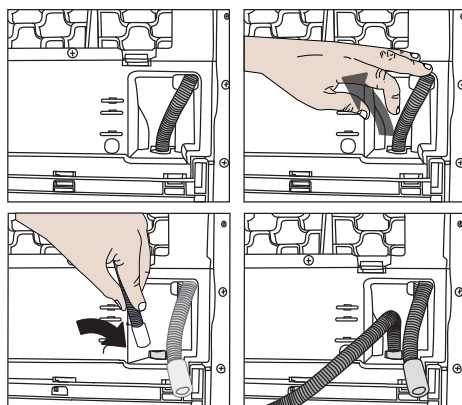

Connecting the water drain hose

1. Pull hose in the product by hand in order to disconnect it from where it is connected. Do not use any tools to remove the hose.
2. Connect one end of the drain hose supplied separately with the product to the connection point from where you removed the hose of the product in previous step.
3. Connect the other end of the drain hose directly to the wastewater drain or to the washbasin.



CAUTION: Hose must be secured in every type of connection. Your house will be flooded if the hose comes loose during water discharge.



Attach the water drain hose to a height of maximum 80 cm.

Installation




Make sure that the water drain hose is not stepped on, twisted or bent between the drain and the machine.

3.6 Adjusting the feet

In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet.

Turn the feet to left or right until the machine stands level and firmly.

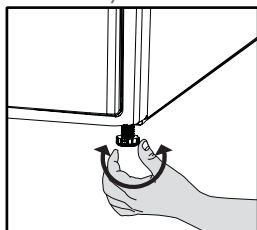

CAUTION: Never unscrew the adjustable feet from their housings.

3.7 Transportation of the product

1. Unplug the product before transporting it.
2. Remove the water drain (if any) and vent connections.
3. Drain the water in the product completely.




CAUTION: We recommend carrying the product in upright position. If it is not possible to carry the machine in the upright position, we recommend carrying it by tilting towards the right side when looked from the front. After the product is moved to its new place, wait for 12 hours before starting it.


3.8 Warnings related to sound



It is normal to hear a metallic noise sometimes from the compressor during operation.

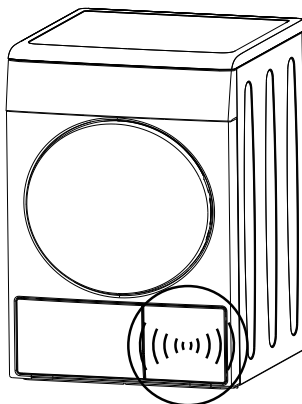

Water collected during operation is pumped to water tank via water pump. It is normal to hear pumping noise during this process.

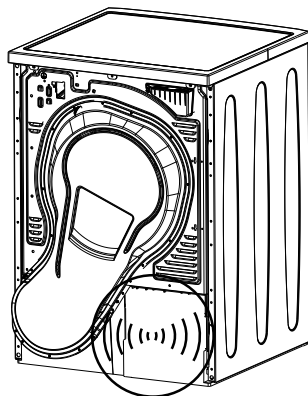

4 Preparation

4.1 Laundry suitable for drying in the machine

- Always obey the instructions given on the garment tags. Dry only the laundry having a label stating that they are suitable for drying in a dryer and make sure that you select the appropriate programme.

LAUNDRY DRYING SYMBOLS										
	Drying Symbols									
		Suitable for dryer	No Iron	Sensitive / Delicate dry	Do not dry with dryer	Do not dry	Do not dry - clean			
	Drying Settings									
		At any temperature	At high temperature	At medium temperature	At low temperature	Without heating	Hang to dry	Lay to dry	Hang wet to dry	Lay in shadow to dry
	Iron -									
	Dry or Steam				Iron at high temperature	Iron at medium temperature	Iron at low temperature	Do not iron	Iron without steam	
	Maximum temperature				200 °C	150 °C	110 °C			

4.2 Laundry unsuitable for drying in the machine

- Laundry and items stated below are not suitable for drying in a dryer:
- Laundry items with metal attachments such as metal buttons, metal reinforcements or belt buckles.
- Woollen or silk garments, nylon stockings, delicate embroidered fabrics and sleeping bags.
- Garments made of delicate and valuable fabrics.
- Tulle curtains.
- Items made of hermetic fibres such as pillows and quilts.
- Very wet laundry items.
- Unwashed dirty laundry items.

- Laundry items containing rubber foam or rubber.

4.3 Preparing clothes to be dried

- Check all garments before loading into the machine and make sure that there is no any lighters, coins, metal pieces, needles, and etc. in their pockets or on them.
- Laundry may be tangled after washing. Separate the laundry items before placing them into the dryer.
- Sort the laundry according to their types and thicknesses. Dry the same type of laundry together. For instance, thin kitchen towel and table cloths get dry earlier than the thick bath towels.

Preparation



Laundry must be spun at the highest spin speed that the washing machine allows on basis of the fabric type.

4.4 Things to be done for energy saving


Following information will help you use the product in an ecological and energy-efficient manner.

- Operate the product at a capacity suitable for the programme you have selected and pay attention not to overload.
- Spin your laundry at the highest speed possible when washing them. Thus, the drying time is shortened and energy consumption is reduced.
- Dry the same type of laundry together.
- Follow the instructions in the user manual for programme selection.
- Leave sufficient clearance at the front and rear side of the dryer for air circulation. Do not block the ventilation grills at the front side of the product.
- Do not open the loading door of the machine during drying unless necessary. If you must certainly open the loading door, do not to keep it open for a long time.
- Do not add new (wet) laundry during drying.
- Lint and fiber released from the laundry to the air during the drying cycle are collected in the Lint Filter. Clean the lint filter before or after each drying cycle.
- Clean the filter drawer regularly either when the Filter Drawer Cleaning warning symbol appears or after every 5 drying cycles.
- Ventilate the room, where the dryer is located, well during drying.

4.5 First use

Before starting to use the product, make sure that all preparations are in place pursuant to the instructions in sections "Important Safety Instructions" and "Installation".

4.6 Correct load capacity

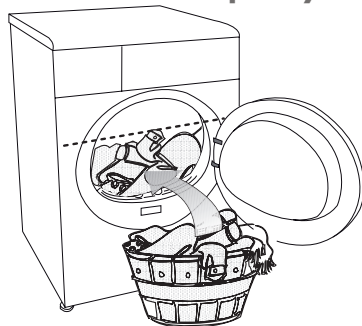

Follow the instructions in the "Programme selection and consumption table". Do not load more than the capacity values stated in the table.



It is not recommended to load the dryer with laundry exceeding the level indicated in the figure. Drying performance will degrade when the machine is overloaded. Furthermore, dryer and the laundry can get damaged.


Preparation

Following weights are given as examples.



Home articles	Approximate weights (g)
Cotton quit covers (double)	1500
Cotton quit covers (single)	1000
Bed sheets (double)	500
Bed sheets (single)	350
Large tablecloths	700
Small tablecloths	250
Tea napkins	100
Bath towels	700
Hand towels	350
Garments	Approximate weights (g)
Blouses	150
Cotton shirts	300
Shirts	200
Cotton dresses	500
Dresses	350
Jeans	700
Handkerchiefs (10 pieces)	100
T-Shirts	125

4.7 Loading the laundry

1. Open the loading door.
2. Place the laundry in the machine without compressing.
3. Push the loading door to close.




CAUTION: Ensure that no items are caught in the door.

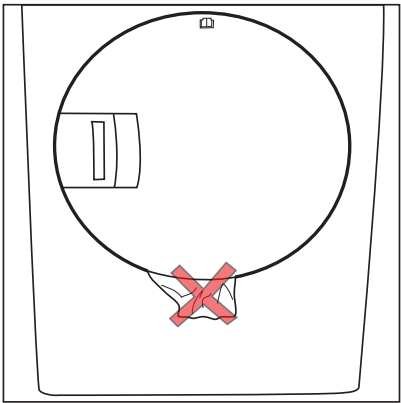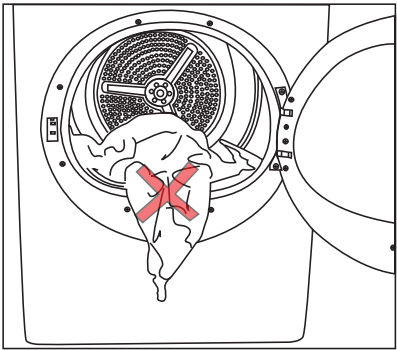

5 Operating the product

5.1 Control panel

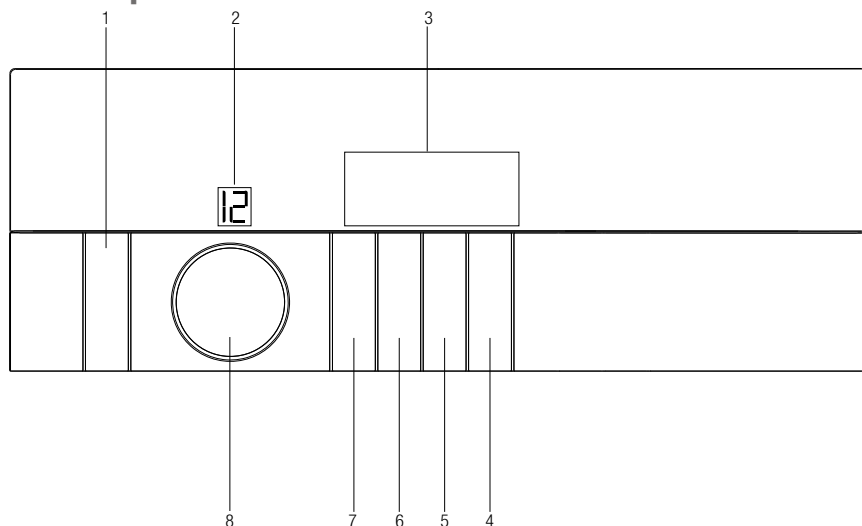

1. On/Off/Cancel button
2. Programme number indicator
3. Display
4. Start / Pause button
5. End time setting selection button
6. Audio warning level / Child lock button
7. Timer programmes selection button
8. Programme selection knob

5.2 Display Symbols



2:25

Remaining time indicator*



Filter Drawer Cleaning warning symbol



Filter cleaning warning symbol



Audio warning Symbol



Child Lock warning symbol



Water Tank warning symbol



End Time Symbol



Start / Pause symbol



Programme progress bar

*Time that appears on display indicates the remaining time until the end of the programme and changes according to the dampness level of the laundry and model of the dryer.

Operating the product

5.3 Preparing the machine

1. Plug in the machine.
2. Place the laundry in the machine.
3. Press the **On/off/cancel** button for 1 second (long).
4. When your machine is operated for the first time, it starts with the default programme (wardrobe dryness for cottons).



Pressing the On/Off/Cancel button does not necessarily mean the programme has started. Press **Start/Pause** button to start the programme.

5.4 Programme selection

1. Decide the appropriate programme from the table below which includes drying levels.
2. Select the desired programme with the **Programme Selection** knob.

Extra Dry	Only the cotton laundry is dried at normal temperature. Thick and multi layered laundry (towels, linens, jeans and etc.) are dried in a way that they do not require ironing before being placed in the wardrobe.
Cupboard Dry	Normal laundry (tablecloths, underwear and etc.) are dried in a way that they do not require ironing before being placed in the wardrobe.
Cupboard Dry Plus	Normal laundry (shirts, dresses and etc.) are dried ready to be ironed.
Iron Dry	Normal laundry (E.g.: tablecloths, underwear) are dried in a way that they do not require ironing before placing in the drawers, but more than those in the ready to wear option.



For further programme details, see, "Programme selection and consumption table".

5.5 Main programmes

Depending on the fabric type, the following main programmes are available:

• Cottons

Dry durable laundry with this programme. Dries at normal temperature. It is recommended to use for your cotton items (bed sheets, quilt covers, towels, bathrobes, etc.).

▪ Synthetics

Dry less durable laundry with this programme. Recommended for synthetics.

5.6 Additional programmes

For special cases, following additional programmes are available in the machine.



Additional programmes may differ according to the features of your machine.

▪ Bedding

Dry fiber quilts with 'machine-dryable' label only. Make sure you are loading the quilt in the correct way to avoid damages on the machine and the quilt. Take out the quilt cover before loading the quilt in the machine. Fold the quilt in two before loading.

- Do not load more than 1 double-size fiber quilt (200x200 cm). Do not dry items containing cotton such as quilts, pillows and etc.

- Do not dry items other than quilts such as carpets, rugs or mats. Permanent damage may arise in your machine.



To obtain better results from your dryer, your laundry must be washed with suitable programmes and spun at the recommended spin speeds in the washing machine.

Operating the product

▪ Shirts

This programme dries the shirts more sensitively and creases them less and thus, helps to iron them more easily.



There may be a little moisture on the shirts at the end of the programme. We recommend you not to leave the shirts in the dryer.

▪ Jeans

Use this programme to dry your jeans that are spun at high speeds in the washing machine.

▪ Sportswear

Use this programme to dry together the synthetic and cotton laundry items and the laundry items made of mixed fabrics.

▪ Wool refresh

Use this programme to ventilate and soften the woollen laundry that can be washed in the washing machine. Do not use to dry the laundry completely. Take out and ventilate the laundry immediately after the programme is over.

▪ Daily

This programme is used to dry cottons and synthetics daily, and lasts for 90 minutes.

▪ Shirts 30'

Use this programme to make 2 shirts ready for ironing in 30 minutes.

▪ Delicates

You can dry your highly delicate laundry (silk blouses, fine underwear, etc.) that are suitable for drying or laundry which is advised to be hand-washed at a lower temperature.



It is recommended to use a cloth bag to avoid certain delicate garments and laundry from getting creased or damaged. Take your laundry immediately out of the dryer and hang them after the programme ends in order to prevent them being creased.

▪ Refresh

Only ventilation is performed for 10 minutes without blowing hot air. You can air the clothes that have been kept in closed environments for a long time and deodorize unpleasant odours thanks to this programme.

▪ Timer programmes

You can select one of the 10 min., 20 min., 30 min., 40 min., 50 min., 60 min., 80 min., 100 min., 120 min., 140 min. and 160 min. timer programmes to achieve the desired final drying level at low temperatures.








With this programme, the machine dries for the time selected regardless of the dryness level.

Operating the product

Programme selection and consumption table

EN

Programmes	Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Drying time (minutes)
Cottons / Coloureds				
 Extra dry	8	1000	60 %	190
 Cupboard dry	8	1000	60 %	179
 Iron dry	8	1000	60 %	150
Shirts 30'	0.5	1200	60 %	30
Shirts	1.5	1200	50 %	50
Jeans	4	1200	50 %	120
Bedding	2.5	1000	40 %	150
Sportswear	4	1000	60 %	105
Daily	4	1200	50 %	90
Delicates	2	600	40 %	55
Wool Refresh	1.5	600	50 %	8
Synthetics				
 Cupboard dry	4	800	40 %	70
 Iron dry	4	800	40 %	55
Energy consumption values				
Programmes	Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Energy consumption value kWh
Cupboard dry for cottons*	8	1000	60 %	2.47
Iron dry for cottons	8	1000	60 %	2.1
Cupboard dry for synthetics	4	800	40 %	0.95


* : Energy Label standard programme (EN 61121:2012)

All values given in the table have been fixed according to EN 61121:2012 Standard. These values may deviate from the values in the table according to the laundry type, laundry spin speed, environmental conditions and voltage fluctuations.

Operating the product

5.7 Auxiliary functions

Audio Warning

 The machine will give an audio warning when the programme comes to an end. Use the **Audio Warning Level** button to adjust the sound level.



You can change the sound level either before the programme starts or while the programme is in progress.



Anti-creasing

A 2-hour anti creasing programme to prevent laundry from creasing will be activated if you do not take the laundry out after the programme has come to an end. This programme rotates the laundry in 10-minute intervals without heat to prevent creasing.

5.8 Warning symbols



 
Warning symbols may differ according to the model of your machine.

Lint filter cleaning

When the programme is completed, a warning symbol will appear to remind that the filter needs to be cleaned.



If the Filter Cleaning symbol in continuously, refer to "Troubleshooting" section.



Water tank

When the programme is completed, a warning symbol will appear to remind that the water tank needs to be drained. If the water tank becomes full while the programme is running, the warning symbol will start to flash and machine will pause. Drain the water in the water tank and press **Start / Pause** button to resume the programme. The warning symbol turns off and the programme resumes operating.



Cleaning the filter drawer

Warning symbol flashes with certain intervals to remind that the filter drawer needs to be cleaned.



End Time Setting

End Time Setting function allows you to delay the ending time of the programme up to 24 hours.

1. Open the loading door and put the laundry in.
2. Select the drying programme, spin speed and, if required, the auxiliary functions.
3. Press **End Time Setting** selection button to set the desired **End Time Setting** symbol lights up on the display. (When the button is pressed and hold, End Time proceeds uninterruptedly).
4. Press **Start/Pause** button. **End Time Setting** starts to count down. The ":" in the middle of the displayed **End Time Setting** will start to flash.

Operating the product



Additional laundry may be loaded / taken out during the End Time period. At the end of the End Time countdown process, End Time symbol disappears, drying process starts and the programme duration is displayed. The time on the display is the total of normal drying time and End Time .

Changing the End Time

If you want to change the time during countdown:

1. Press **On/Off/Cancel** button for 3 seconds to cancel the programme. Restart the machine and repeat the End Time procedure for the desired time.
2. When your machine is operated for the first time, it starts with the default programme (wardrobe dryness for cottons).

Cancelling End Time function

If you want to cancel the End Time countdown and start the programme immediately:

1. Press **On/Off/Cancel** button for 3 seconds to cancel the programme.
2. Press **On/Off/Cancel** button to start the programme you have previously selected.

5.9 Starting the programme

Press **Start/Pause** button to start the programme.

Start ► symbol will light up to indicate that the programme has started and “.” symbol in the middle of the remaining time will keep flashing.

5.10 Child Lock


Machine is equipped with a Child Lock which prevents interfering with the current programme flow by pressing any button. All buttons except the **On/Off/Cancel** button on the control panel are deactivated when the Child Lock is active.

In order to activate the Child Lock, press Audio Warning, Child Lock button for 3 seconds.

To start a new programme after the current programme is over or to interrupt the current programme, the Child Lock should be deactivated. Press the same button for 3 seconds again **to deactivate the Child Lock**.



Lock symbol will appear on the display when the Child Lock is activated.

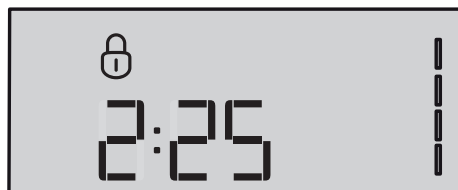

Child Lock is deactivated when the machine is switched off and on with **On/Off/Cancel** button.

When the Child Lock is activated:

- Display symbols will not change even if the position of Programme Selection knob is changed while the machine is running or in halt.
- If the Child Lock is deactivated after changing the position of the Programme Selection knob while the machine is running, the machine stops and new programme information is displayed.

5.11 Changing the programme after it has started

After the machine starts, you can change the selected programme and dry your laundry in a different programme.

1. If you want to select Extra Dry programme instead of Iron Dry programme, for instance, press the **Start / Pause** button for 1 second to stop the programme.
2. Select Extra Dry programme by turning the Programme Selection knob.
3. Press the **Start/Pause** button to start the programme.

Operating the product

Adding / removing laundry in Pause mode

In order to add or take out laundry after the drying programme has started:

1. Press **Start/Pause** button to switch the machine to **Pause** mode. Drying process will stop.
2. While in **Pause** mode, open the loading door, add or take out laundry and close the loading door.
3. Press the **Start/Pause** button to start the programme.



Any laundry added after the drying process has started may cause the clothes that are already dried in the machine intermingle with wet clothes and the result will be wet laundry after the drying process is over.



You may repeat laundry adding or removing process as many times as you desire during drying. However, this process will increase the programme time and energy consumption since the drying process will be interrupted repeatedly. Therefore, it is recommended to add laundry before the drying programme has started.



If you select a new programme by turning the Programme Selection knob while your machine is in Pause mode, then the current programme is aborted and new programme information is displayed.



CAUTION: Do not touch the inner surface of the drum when adding or taking out laundry while a programme is running. Surfaces of the drum are hot.

5.12 Cancelling the programme

If you want to stop drying and cancel the programme for any reason after the machine has started to run, press and hold the **On/Off/Cancel** button for 3 seconds.



CAUTION: As the inside of the machine will be excessively hot when you cancel the programme while the machine is running, activate the ventilation programme to cool it down.

5.13 End of programme

Lint Filter Cleaning and Water Tank warning symbols light up in the programme follow-up indicator when the programme comes to an end. The loading door can be opened and the machine becomes ready for a second cycle.

Press **On/Off/Cancel** button to switch off the machine.



2-hour Anti-creasing programme will be activated if the laundry is not taken out after the programme has come to an end.



Clean the lint filter after each drying. (See "Lint Filter and Loading Door Inner Surface")



Drain the water tank after each drying cycle. (See "Draining the water tank")

6.1 Preparing the machine


1. Plug in the machine.
2. Place the laundry in the machine.
3. Press the **On/off/cancel** button for 1 second (long).
4. When your machine is operated for the first time, it starts with the default programme (wardrobe dryness for cottons).

6.2 Programme selection

1. Decide the appropriate programme from the table below which includes drying levels.
2. Select the desired programme with the **Programme Selection** knob.

6.3 Auxiliary functions

Audio Warning

 The machine will give an audio warning when the programme comes to an end. Use the **Audio Warning Level** button to adjust the sound level.

Anti-creasing

A 2-hour anti creasing programme to prevent laundry from creasing will be activated if you do not take the laundry out after the programme has come to an end. This programme rotates the laundry in 10-minute intervals to prevent creasing.


Cancelling End Time function

If you want to cancel the End Time countdown and start the programme immediately:

1. Press **On/Off/Cancel** button for 3 seconds to cancel the programme.
2. Press **On/Off/Cancel** button to start the programme you have previously selected.

6.4 Starting the programme

Press Start/Pause button to start the programme.

Start  symbol will light up to indicate that the programme has started and “:” symbol in the middle of the remaining time will keep flashing.

6.5 End of programme

Lint Filter Cleaning and Water Tank warning symbols light up in the programme follow-up indicator when the programme comes to an end. The loading door can be opened and the machine becomes ready for a second cycle.

Press **On/Off/Cancel** button to switch off the machine.

6.6 Child Lock

Machine is equipped with a Child Lock which prevents interfering with the current programme flow by pressing any button. All buttons except the **On/Off/Cancel** button on the control panel are deactivated when the Child Lock is active.

In order to activate the Child Lock, press Audio Warning, Child Lock button for 3 seconds.

To start a new programme after the current programme is over or to interrupt the current programme, the Child Lock should be deactivated. Press the same button for 3 seconds again to **deactivate the Child Lock**.



Lock symbol will appear on the display when the Child Lock is activated.



Child Lock is deactivated when the machine is switched off and on with **On/Off/Cancel** button.

When the Child Lock is activated:

- Display symbols will not change even if the position of Programme Selection knob is changed while the machine is running or in halt.
- If the Child Lock is deactivated after changing the position of the Programme Selection knob while the machine is running, the machine stops and new programme information is displayed.

7 Maintenance and cleaning

Service life of the product extends and frequently faced problems decrease if cleaned at regular intervals.



CAUTION: Unplug the product from the mains during any maintenance and cleaning works (control panel, body, etc.).

7.1 Lint Filter / Loading Door Inner Surface

Lint and fiber released from the laundry to the air during the drying cycle are collected in the Lint Filter.



Such fiber and lint are generally formed during wearing and washing.




CAUTION: Always clean the lint filter and the inner surfaces of the loading door after each drying process.





You can clean the lint filter housing with a vacuum cleaner.



A layer can build up on the filter pores that can cause clogging of the filter after using the machine for a while. Wash the lint filter with warm water to remove the layer that builds up on the lint filter surface. Dry the lint filter completely before reinstalling it.




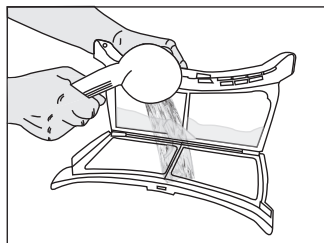


Clean the entire inner surface of the loading door and loading door gasket.

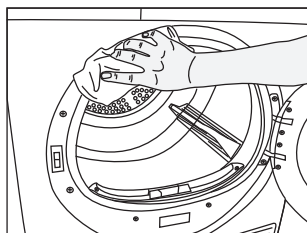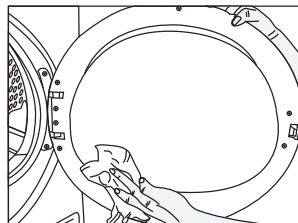

To clean the lint filter:

1. Open the loading door.
2. Remove the lint filter by pulling it up and open the lint filter.
3. Remove lint, fiber, and cotton fibres by hand or with a soft piece of cloth.
4. Close the lint filter and place it back into its housing.

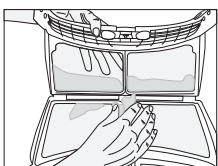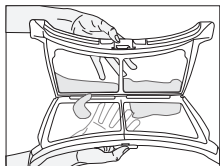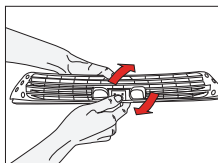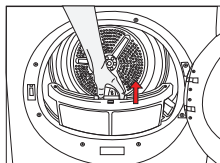


Maintenance and cleaning

7.2 Cleaning the sensors

There are dampness sensors in the machine that detect whether the laundry is dry or not.

To clean the sensors:


1. Open the loading door of the machine.
2. Allow the machine to cool down if it is still hot due to the drying process.
3. Wipe the metal surfaces of the sensor with a soft cloth, dampened with vinegar and dry them.

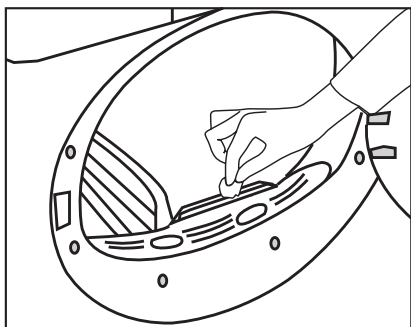


If you forget to drain the water tank, the machine will stop during the subsequent drying cycles when the water tank is full and the Water Tank warning symbol will flash. If this is the case, drain the water tank and press **Start / Pause** button to resume the drying cycle.

To drain the water tank:

1. Pull the drawer and remove the water tank carefully.

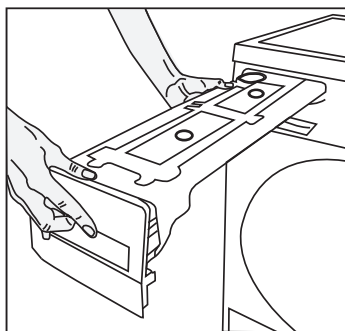

2. Drain the water in the tank.

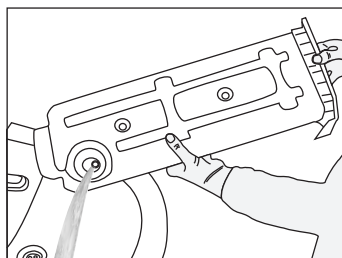

3. If there is lint accumulation in the funnel of the water tank, clean it under running water.
4. Place the water tank into its seat.

7.4 Cleaning the filter drawer

Lint and fiber that could not be captured by the lint filter are blocked in the filter drawer behind the kick plate. Filter Drawer Cleaning warning light will light up maximum at every 5 drying cycles as a reminder.



Clean metal surfaces of the sensors 4 times a year.



Do not use metal tools when cleaning metal surfaces of the sensors.



CAUTION: Never use solvents, cleaning agents or similar substances for cleaning due to the risk of fire and explosion!

7.3 Draining the water tank

Dampness of the laundry is removed and condensed during drying process and the water that forms accumulates in the water tank. Drain the water tank after each drying cycle.



CAUTION: Condensed water is not drinkable!




CAUTION: Never remove the water tank when the programme is running!

Maintenance and cleaning


There is a two-level filter in the filter drawer. The first level is the filter drawer sponge and the second level is the filter cloth.

To clean the filter drawer:


1. Press the kick plate button to open the kick plate.

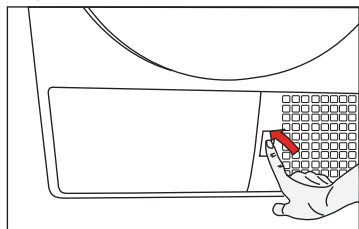


2. Remove the filter drawer cover by turning it in the direction of arrow.

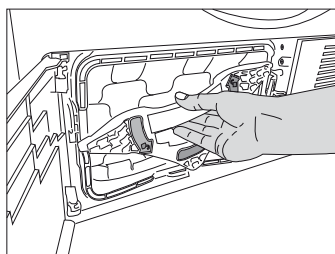


3. Pull out the filter drawer.

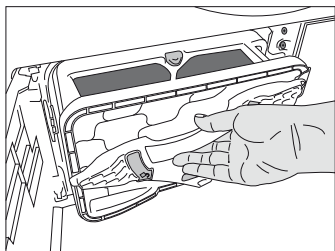

4. Open the filter drawer by pressing the red button.

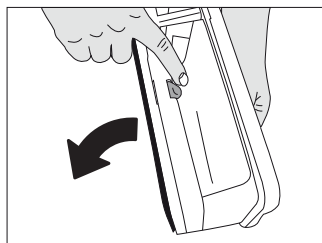


5. Take out the filter drawer sponge.

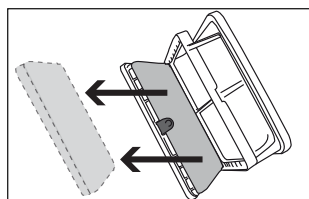

6. Remove lint, fiber, and cotton fibres on the filter cloth by hand or with a soft piece of cloth.



When you notice a layer that may lead clogging of the filter cloth, please clean the layer by washing in warm water. Let the filter cloth dry thoroughly before installing in the filter drawer.

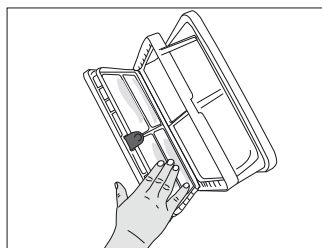


7. Wash the filter drawer sponge by hand to remove the fiber and lint on the surface. After washing the sponge, squeeze it by hand and remove the excess water.




It is not necessary to clean the sponge if lint and fiber accumulation on it is not significant.

Maintenance and cleaning


8. Place the sponge back into its place.

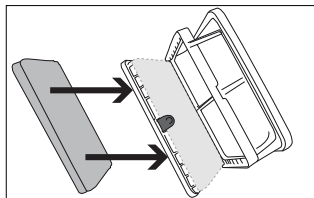


9. Close the filter drawer as to lock the red button.

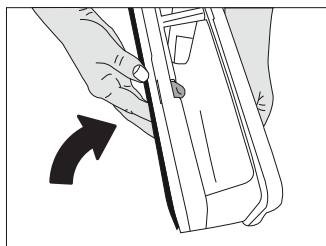

10. Place the filter drawer back into its place, turn the filter drawer cover in the arrow direction and close it securely.

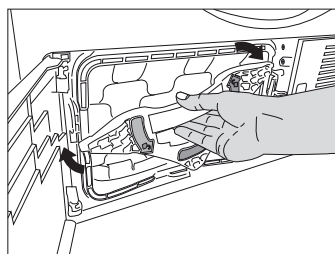

11. Close the kick plate cover.

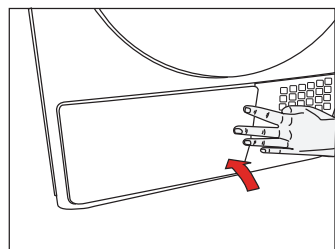

CAUTION: Drying without the filter drawer sponge in place will damage the machine!




A dirty lint filter and filter drawer will cause longer drying periods and higher energy consumption.



A layer can build up on the filter pores that can cause clogging of the filter after using your machine for a while. Wash the lint filter with warm water to remove the layer that builds up on the lint filter surface. Dry the filter completely before using it.

7.5 Cleaning the evaporator

Clean the lint accumulated on the fins of the evaporator located behind the filter drawer with a vacuum cleaner.

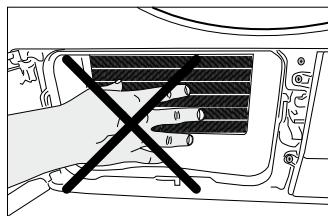

CAUTION: You can also clean by hand provided that you wear protective gloves. Do not attempt to clean with bare hands.

8 Troubleshooting

Drying process takes too much time.

- Pores of the lint filter are clogged. >>> Wash the lint filter with warm water.
- Filter drawer is clogged. >>> Clean the sponge and the filter cloth in the filter drawer.
- Ventilation grids on the front side of the machine are blocked. >>> Remove the objects (if any) that block ventilation in front of the ventilation grids.
- Ventilation may not be sufficient since the room where the machine is installed is very small. >>> Open the door and windows of the room to avoid the room temperature increase too much.
- Lime deposit has built up on the dampness sensor. >>> Clean the dampness sensor.
- Excessive laundry might have been loaded in. >>> Do not overload the dryer.
- Laundry might not be spun sufficiently. >>> Spin your laundry at a higher speed in your washing machine.

Laundry comes out wet at the end of drying.

- A programme suitable for the laundry type might have not been used.>>> Check the garment tag and select a programme suitable for the fabric type or use the timer programmes additionally.
- Pores of the lint filter are clogged. >>> Wash the lint filter with warm water.
- Filter drawer is clogged. >>> Clean the sponge and the filter cloth in the filter drawer.
- Excessive laundry might have been loaded in. >>> Do not load the dryer in excess.
- Laundry might not be spun sufficiently. >>> Spin your laundry at a higher speed in your washing machine.

Dryer does not switch on or the programme does not start. Dryer does not start when it is set.

- It might have not been plugged in. >>> Make sure that the machine is plugged in.
- The loading door is ajar. >>> Make sure that the loading door is closed securely.
- Programme is not selected or the Start / Pause button is not pressed. >>> Make sure that the programme is selected and it is not in the Pause position.
- "Child Lock" might have been activated. >>> Deactivate the Childproof Lock.

Programme is interrupted without any cause.

- The loading door might not be closed securely. >>> Push the loading door to close until you hear a locking sound.
- A power failure might have occurred. >>> Press Start / Pause button to start the programme.
- Water tank may be full. >>> Drain the water tank.

Laundry has shrunk, become felted or deteriorated.

- A programme suitable for the laundry type might have not been used. >>> Check the garment tag and select a programme suitable for the fabric type.

Water leaks from the loading door.

Troubleshooting

- Lint has accumulated on the inner surfaces of the loading door and on the surfaces of the loading door gasket. >>> Clean the inner surfaces of the loading door and the surfaces of the loading door gasket.

Loading door opens spontaneously.

- The loading door might not be closed securely. >>> Push the loading door to close until you hear a locking sound.

Water Tank warning symbol is on/flashing.

- Water tank may be full. >>> Drain the water tank.
- Water draining hose might be bent. >>> If the product is connected directly to a wastewater drain, check the water drain hose.

Drum lighting does not turn on. (On models with lamp)

- Dryer is not switched on with the On / Off / Cancel button. >>> Make sure that the dryer is switched on.
- Bulb may have blown. >>> Call Authorised Service Agent to have the lamp replaced.

Anti-creasing symbol is on.

- Anti-creasing programme is activated in order to prevent laundry that has remained in the machine from creasing. >>> Turn off the dryer and take out the laundry.

Lint Filter Cleaning symbol is on.

- Filter housing is clogged with lints. >>> Clean the lint filter housing.
- A deposit has built up on the lint filter pores that may cause clogging. >>> Wash the lint filter with warm water.
- Lint filter is not cleaned. >>> Clean the lint filter.

Filter Drawer Cleaning warning symbol is flashing.

- Filter drawer is not cleaned. >>> Clean the sponge and the filter cloth in the filter drawer.



CAUTION: If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorised Service Agent. Never try to repair a nonfunctional product yourself.

9 Electrical Connection

Make sure that you have an earthed power outlet socket rated at 10 amps (minimum).

Attention!

When installed, the socket must be reachable after installation, or a separate switch (which can disconnect the two poles) must be used in the installation. Check for suitability.

For a permanent connection, a master switch with at least 3mm contact clearance and minimum 10 A rating must be used.

Electrical requirements

Before you insert the plug into the wall socket make sure that the voltage and the frequency shown in the rating label corresponds to your electricity supply.

We recommend that this appliance be connected to the mains supply via a suitable switched and fused socket in a readily accessible position.

Should the mains lead of the appliance become damaged or need replacing at any time, it must be replaced by a special purpose made mains lead which can only be obtained from an Authorised Service Agent.


Warning

This appliance must be earthed

If the fitted moulded plug is not suitable for your socket, then the plug should be cut off and an appropriate plug fitted.


The moulded plug on this appliance incorporates a 10A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers are available from any good electrical store.

In order to avoid hazards, damaged supply cord should be replaced by the manufacturer, its service agent or similarly qualified people.

 Do not operate without the top cover fitted. Risk of injury.

Important Fitting a different plug


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:

1 Connect the green - yellow or green (earth) wire to the terminal in the plug marked 'E' or with the symbol  or coloured green and yellow or green.

2 Connect the blue (neutral) wire to the terminal in the plug marked 'N' or coloured black.

3 Connect the brown (live) wire to the terminal in the plug marked 'L' or coloured red.

With the alternative plugs a 10 A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.

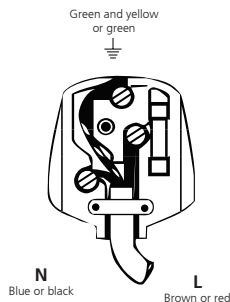

Washer/dryer combination

Do not stack washing machine on top of the tumble dryer. This would damage both appliances and guarantees would become void. It is also unsafe to stack an appliance on top of another without using a suitable and approved stacking kit obtained from specialist retailers.

GRUNDIG

Guarantee for Refrigeration, Cooking Appliances, Washing Machines, Tumble Dryers & Dishwashers.

Your new Grundig product is guaranteed against the cost of breakdown repairs for five years from the date of the original purchase.

What is covered?

- Repairs necessary as a result of faulty materials, defective components or manufacturing defect.
- The cost of functional replacement parts, but excluding consumable items.
- The labour costs of a Grundig approved repairer to carry out the repair

What is not covered?

- Transit, delivery or accidental damage or misuse and abuse.
- Cabinet or appearance parts, including knobs, flaps, handles or container lids.
- Accessories or consumable items including but not limited to, ice trays, scrapers, cutlery baskets, filters and light bulbs.
- Repairs required as a result of unauthorised repair or inexperienced installation that fails to meet the requirements contained in the user instruction book.
- Repairs to products used on commercial or non-residential household premises.
- Loss of frozen food in freezers or fridge/freezers. (Food loss insurance is often included within your household contents insurance policy, or may be available separately from your retailer).

Important notes.

- Your Grundig product is designed and built for domestic household use only.
- The guarantee will be void if the product is installed or used in commercial or non-residential domestic household premises.
- The product must be correctly installed, located and operated in accordance with the instructions contained in the User Instructions Booklet provided.
- Professional installation by a qualified Electrical Domestic Appliance Installer is recommended for all Washing Machines, Dishwashers and Electric Cookers
- Gas Cookers must only be installed by a Gas safe (or BORD GAIS) registered Gas Installer.
- The guarantee is given only within the boundaries of the United Kingdom and the Republic of Ireland.
- The guarantee is applicable only to new products and is not transferable if the product is resold.
- Grundig disclaims any liability for incidental or consequential damages.
- The guarantee does not in anyway diminish your statutory or legal rights.
- The product guarantee does not cover damages to plates, glass ware, cutlery, crockery and also damage to the product itself as a result of using these "Three-in-one", "Two-in-one" detergents.

Please keep your purchase receipt or other proof of purchase in a safe place; you will need to have it should the product require attention under guarantee.

You should also complete the details below; it will help us assist you when requesting service.
(The model number is printed on the Instruction Booklet and the serial number is printed on the Rating Label affixed to the appliance)

Model No:

Serial No:

Retailer:

Date of purchase:

For service under guarantee simply telephone the appropriate number below

UK Mainland & Northern Ireland

Fridges & Freezers	0845 603 1234
Electric Cookers	0845 603 1234
Gas&Dual Fuel Cookers	0845 603 1234
Washing Machines & Dishwashers	0845 603 1234

Before requesting service please check the trouble-shooting guide in the Operating Instructions as a charge may be levied where no fault is found even though your product may still be under guarantee.

Service once the manufacturers guarantee has expired.

If you have purchased an extended guarantee please refer to the instructions contained within the extended guarantee agreement document. Otherwise please call the appropriate number above where service can be obtained at a charge.

Should you experience any difficulty in obtaining service please contact the Grundig Customer Help-Line.

Tel: 0845 603 1234

e-mail: service@Grundig.co.uk

Grundig, 1 Greenhill Crescent, Watford Herts WD18 8QU
www.grundig.co.uk

AUS GUTEM GRUND
GRUNDIG