



DRYER

USER INSTRUCTIONS

GTN 48267 GCHB

EN

www.grundig.com

GRUNDIG

TABLE OF CONTENTS

1. Please read this user manual first! 4

2. Important safety and environmental instructions ...5

2.1 General safety	5
2.1.1 Electrical safety	6
2.1.2 Product safety	7
2.2 Mounting over a washing machine	9
2.3 Intended use	9
2.4 Child safety	10
2.5 Compliance with the WEEE regulation and disposing of the waste product	10
2.6 Compliance with RoHS Directive	10
2.7 Package information	10
2.8 Technical specifications	11

3 Your Dryer 12

3.1 Overview	12
3.2 Package Contents	13

4. Installation 14

4.1 Appropriate installation location	14
4.2 Removing the transportation safety assembly	14
4.3 Under counter installation	15
4.4 Connecting to the drain	15
4.5 Adjusting the feet	16
4.6 Electrical connection	16
4.7 Transportation of the dryer	16
4.8 Warnings about sounds	17
4.9 Changing the illumination lamp	17

5. Preparation 18

5.1 Laundry suitable for drying in the dryer	18
5.2 Laundry not suitable for drying in the dryer	18
5.4 Things to be done for energy saving	18
5.5 Correct load capacity	19

6. Operating your machine 20

6.1 Control Panel	20
6.2 Screen symbols	20
6.3 Preparing the Machine	21
6.4 Program selection	21
6.5 Main programs	21
6.6 Additional programs	21
6.7 Program selection and consumption chart	24
6.8 Auxiliary functions	25
6.9 Fast Drying	27
6.10 Warning symbols	27
6.11 Starting the program	29
6.12 Program progress status	29
6.13 Child Lock	29
6.14 Changing the program after it is started	30
6.15 Cancelling the program	30
6.16 End of program	31
6.17 Drying Rack	32

7 HomeWhiz function 36

7.1 HomeWhiz Setup and Wireless Network Connection Setting	36
7.2 Usage of HomeWhiz Function	37
7.3 Troubleshooting	40

8. Maintenance and cleaning 41

8.1 Cleaning Lint Filter / Loading Door Inner Surface	41
8.2 Cleaning the sensor	42
8.3 Draining the water tank	42
8.4 Cleaning the filter drawer	43
8.5 Cleaning the evaporator	44

9. Troubleshooting 45

10. Electrical Connection 47

10.1 Attention!	47
10.2 Electrical requirements	47
10.3 Fitting a different plug	47
10.4 Washer/dryer combination	47

1. Please read this user manual first!

Dear Customer,

Thank you for preferring an Grundig product. We hope that your product which has been manufactured with high quality and technology will give you the best results. We advise you to read through this manual and the other accompanying documentation carefully before using your product and keep it for future reference. If you transfer the product to someone else, give its manual as well. Pay attention to all details and warnings specified in the user manual and follow the instructions given therein.

Remember that this user manual is also applicable for several other models. Differences between models will be identified in the manual.



Read the instructions.

Explanation of symbols

Throughout this user manual the following symbols are used:



Important information or useful hints about usage.



Warning for hazardous situations with regard to life and property.



Warning against electric shock.



Warning against hot surfaces.



Warning against fire hazard.



Packaging of the product is made of recyclable materials pursuant to our national environment legislation.

Do not dispose of the packaging wastes with the domestic waste or other wastes, discard them to the dedicated collection points designated by the local authorities.

2. Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

2.1 General safety

- The dryer can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children should not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone.
- Children of less than 3 years should be kept away unless continuously supervised.
- Adjustable feet should not be removed. The gap between the dryer and the floor should not be reduced with materials such as carpet, wood and tape. This will cause problems with the dryer.
- Always have the installation and repairing procedures carried out by the **Authorized Service**. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
- Never wash the dryer by spraying or pouring water onto it! There is the risk of electric shock!

2.1.1 Electrical safety



Electrical safety instructions should be followed while electrical connection is made during the installation.



The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.

- Connect the dryer to a grounded outlet protected by a fuse at the value specified on the type label. Have the grounding installation performed by a qualified electrician. Our company shall not be liable for any damages that will arise when the dryer is used without grounding in accordance with the local regulations.
- The voltage and allowed fuse protection is stated on the type label plate.
- The voltage specified on the type label must be equal to your mains voltage.
- Unplug the dryer when it is not in use.
- Unplug the dryer from the mains during installation, maintenance, cleaning and repair works.
- Do not touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Do not use extension cords, multi-plugs or adaptors to connect the dryer to power supply in order to decrease the risk of fire and electric shock.
- Power cable plug must be easily accessible after installation.



Damaged mains cable should be changed notifying the Authorized Service.



If the dryer is faulty, it must not be operated unless it is repaired by an authorized service agent! There is the risk of electric shock!

2.1.2 Product safety



Superheating of the clothes inside of the dryer can occur if you cancel the programme or in the event of a power failure whilst the dryer is running, this concentration of heat can cause self-combustion and fire so always activate the ventilation programme to cool down or quickly remove all laundry from the dryer in order to hang them up and dissipate the heat.



Points to be taken into consideration for fire hazard:

Below specified laundry or items must not be dried in the dryer considering fire hazard.

- Unwashed laundry items
- Items soiled with oil, acetone, alcohol, fuel oil, kerosene, stain removers, turpentine, paraffin or paraffin removers must be washed in hot water with plenty of detergent before being dried in the dryer.

For this reason especially the items containing the above specified stains must be washed very well, to do this use adequate detergent and choose a high washing temperature.



Below specified laundry or items must not be dried in the dryer due to the fire hazard:

- Garments or pillows bolstered with rubber foam (latex foam), shower bonnets, water resistant textiles, materials with rubber reinforcement and rubber foam pads.
- Clothing cleaned with industrial chemicals.




Items such as lighter, match, coins, metal parts, needle etc. may damage the drum set or may lead to functional problems. Therefore check all the laundry that you will load into your dryer.

Never stop your dryer before the programme completes. If you must do this, remove all laundry quickly and lay them out to dissipate the heat.



Clothes that are washed inadequately may ignite on their own and even may ignite after drying ends.

- You must provide enough ventilation in order to prevent gases exiting from devices operating with other types of fuels including the naked flame from accumulating in the room due to the back fire effect.

	Underwear that contains metal reinforcements should not be dried in the dryer. Dryer may be damaged if metal reinforcements come loose and break off during drying.
	Use softeners and similar products in accordance with the instructions of their manufacturers.
	Always clean the lint filter before or after each loading. Never operate the dryer without the lint filter installed.

- Never attempt to repair the dryer by yourself. Do not perform any repair or replacement procedures on the product even if you know or have the ability to perform the required procedure unless it is clearly suggested in the operating instructions or the published service manual. Otherwise, you will be putting your life and others' lives in danger.
- There must not be a lockable, sliding or hinged door that may block the opening of the loading door in the place where your dryer is to be installed.
- Install your dryer at places suitable for home use. (Bathroom, closed balcony, garage etc.)
- Make sure that pets do not enter the dryer. Check the inside of the dryer before operating it.
- Do not lean on the loading door of your dryer when it is open, otherwise it may fall over.
- The lint must not be allowed to accumulate around the tumble dryer

2.2 Mounting over a washing machine

- A fixing device should be used between the two machines when installing the dryer above a washing machine. The fitting device must be installed by the authorized service agent.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the products on a solid floor that has sufficient load carrying capacity!



Washing machine cannot be placed on the dryer. Pay attention to the above warnings during the installation on your washing machine.

Installation Table for Washing Machine and Dryer

Dryer Depth	Washing Machine Depth						
	62 cm	60 cm	54 cm	50 cm	49 cm	45 cm	40 cm
54 cm	Can be stacked					Can be stacked	Cannot be stacked
60 cm	Can be stacked					Cannot be stacked	

2.3 Intended use

- Dryer has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.
- Use the dryer only for drying laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of the dryer that you purchased is 10 years. During this period, original spare parts will be available to operate the dryer properly.

2.4 Child safety

- Packaging materials are dangerous for the children. Keep packaging materials away from children.
- Electrical products are dangerous for the children. Keep children away from the product when it is operating. Do not let them tamper with the dryer. Use the child-proof lock in order to prevent the children to tamper with the dryer.




Child-proof lock is on the control panel. **(See Child lock)**

- Keep loading door closed even when the dryer is not in use.

2.5 Compliance with the WEEE regulation and disposing of the waste product



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

 This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

2.6 Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

2.7 Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

2.8 Technical Specifications




EN	
Height (Min. / Max.)	84,6 cm / 86,6 cm*
Width	59,5 cm
Depth	59,8 cm
Capacity (max.)	8 kg **
Net weight (plastic front door usage)	48,5 kg
Net weight (glass front door usage)	51 kg
Voltage	See type label***
Rated power input	
Model code	

* Min. height: Height with adjustable feet are closed.

Max. height: Height with adjustable feet are opened maximum.


** Dry laundry weight before washing.

*** Type label is located behind the loading door.

	Technical specifications of the dryer are subject to specification without notice to improve the quality of the product.
	Figures in this manual are schematic and may not match the product exactly.
	Values stated on markers on the dryer or in the other published documentation accompanying with the dryer are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the dryer, these values may vary.


3. Your Dryer

3.1 Overview

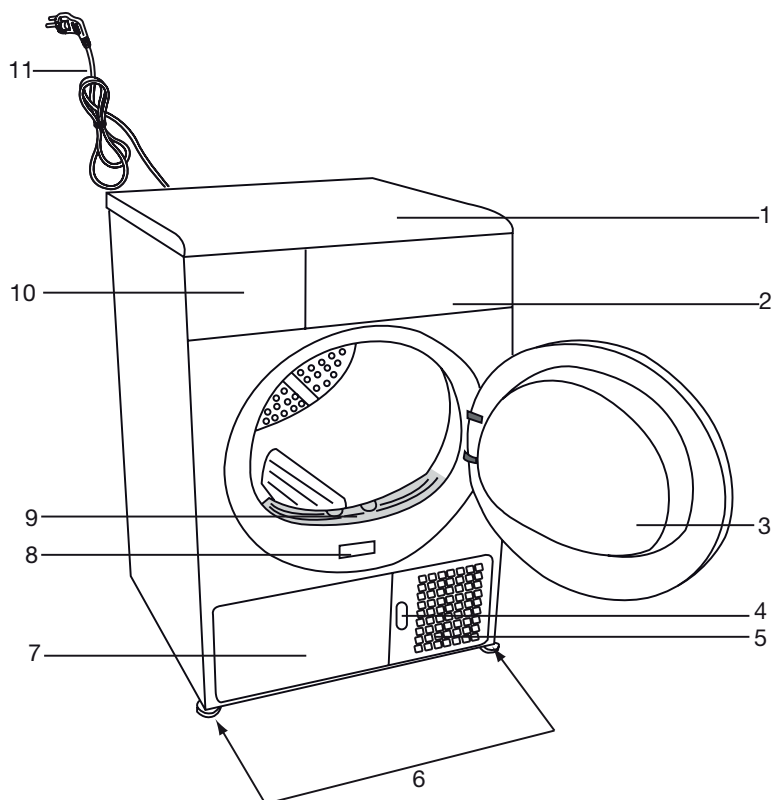

- 1. Top panel
- 2. Control panel
- 3. Loading door
- 4. Kick plate opening button
- 5. Ventilation grids
- 6. Adjustable feet
- 7. Kick plate
- 8. Type label
- 9. Lint filter
- 10. Water tank drawer
- 11. Power cord

3.2 Package Contents

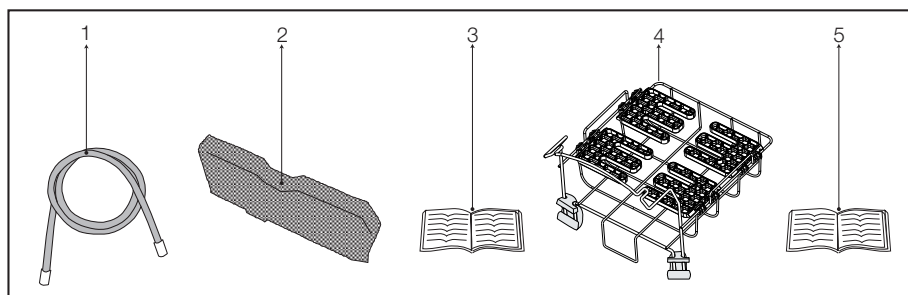




1. Water drain hose *
2. Filter drawer spare sponge*
3. User Manual
4. Drying basket*
5. Drying basket user manual*

*It can be supplied with your machine depending on its model.

4. Installation

Before the calling the nearest Authorized Service for the installation of the dryer, ensure that electrical installation and water drain is appropriate referring to the user's manual. **(See 4.4 Connecting to the drain and 4.6 Electrical connection)** If they are not suitable, contact a qualified electrician and technician to make necessary arrangements.

	Preparation of the dryer's location as well as the electrical and waste water installations is under customer's responsibility.
	Prior to installation, visually check if the dryer has any defects on it. If the drier is damaged, do not have it installed. Damaged products cause risks for your safety.
	Let your dryer wait for 12 hours before starting to use it.

4.1 Appropriate installation location


Install the dryer on a stable and level surface.

Dryer is heavy. Do not move it by yourself.

- Operate your dryer in a well ventilated, dust-free environment.
- The gap between the dryer and the surface should not be reduced by the materials such as carpet, wood and tape.
- Do not cover the ventilation grills of the dryer.
- There must not be a lockable, sliding or hinged door that may


block the opening of the loading door in the place where your dryer is to be installed.

- Once the dryer is installed, it should stay at the same place where its connections have been made. When installing the dryer, make sure that its rear wall does not touch anywhere (tap, socket, etc.).
- Place the dryer at least 1 cm away from the edges of other furniture.
- Your dryer can be operated at temperatures between +5°C and +35°C. If the operating conditions fall outside of this range, operation of the dryer will be adversely affected and it can get damaged.

	Do not place the dryer on the power cable.
---	--

- Your machine has feature to connect to wireless networks. To use the HomeWhiz function, which allows you to monitor and control your machine remotely, ensure that your machine's wireless network signal level is adequate.


4.2 Removing the transportation safety assembly

	Remove the transportation safety assembly before using the dryer for the first time.
---	--

Open the loading door.

- There is a nylon bag inside the drum that contains a piece of styrofoam. Hold it from its section marked with XX XX.
- Pull the nylon towards yourself and remove the transportation

safety assembly.

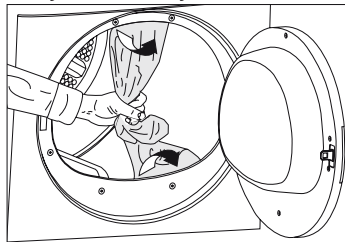

Check that no part of the transportation safety assembly remains inside the drum.

4.3 Under counter installation

- This product can be installed under a counter if the height of the counter is sufficient.



While using undercounter dryer, it should never be operated without undercounter installation part. For the appropriate undercounter installation part contact the Authorized Service.

Dryer Depth	60 cm	54 cm
Stock number of under-bench installation part	2979700200	2973600100

- Leave at least 1 cm of space around the sides and the rear wall of the dryer when installing it under a counter.



If installed under a countertop, drying durations can extend.


4.4 Connecting to the drain

In products equipped with condenser unit, water accumulates in the water tank during the drying cycle. You should drain accumulated water after each drying cycle.

You can directly drain accumulated water through the water drain hose supplied with the product instead of periodically draining the water collected in the water tank.

Connecting the water drain hose

- 1-2 Pull hose at the behind of the dryer by hand in order to disconnect it from where it is connected. Do not use any tools to remove the hose.
- 3 Connect one end of the drain hose supplied with the dryer to the connection point from where you removed the hose of the product in previous step.
- 4 Connect the other end of the drain hose directly to the wastewater drain or to the washbasin.

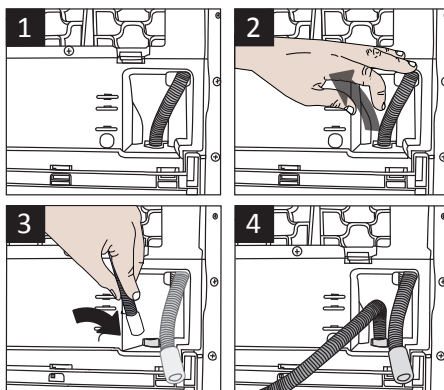



Hose connection should be made in a safe manner. Your drain house will be flooded if the hose comes out of its housing during water discharge.



Water drain hose should be attached to a height of maximum 80 cm.




Make sure that the water drain hose is not stepped on and it is not folded between the drain and the machine.

4.5 Adjusting the feet

In order to ensure that the dryer operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet.

Turn the feet to left or right until the dryer stands level and firmly.

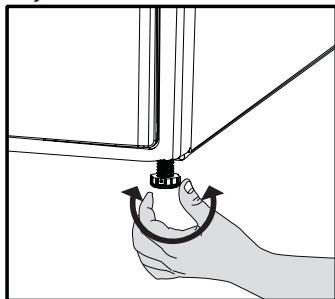

Never unscrew the adjustable feet from their housings.

4.6 Electrical connection

For specific instructions for electrical connection required during installation (see 2.1.1 Electrical Safety)

4.7 Transportation of the dryer

- Unplug the dryer before transporting it.
- Drain all water that has remained in the dryer.

If direct water drain connection is made, then remove the hose connections.




We recommend carrying the dryer in upright position. If it is not possible to carry the machine in the upright position, we recommend carrying it by tilting towards the right side when looked from the front.


4.8 Warnings about sounds



It is normal to hear a metallic noise from the compressor sometimes during operation.

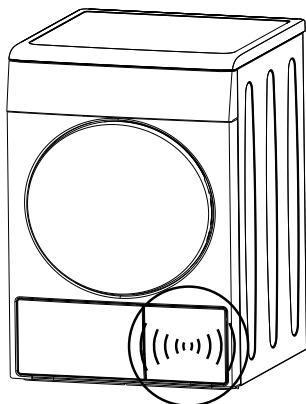

Water collected during operation is pumped to water tank. It is normal to hear pumping noise during this process.

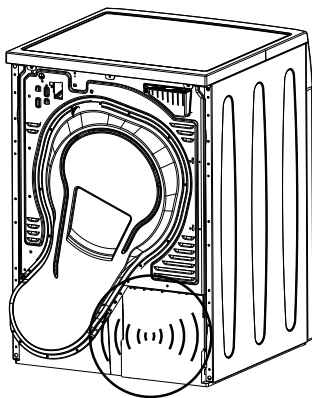

4.9 Changing the illumination lamp

In case an illumination lamp is used in your laundry dryer. To change the Bulb/LED used for illumination of your tumble dryer, call your Authorized Service.

The lamp(s) used in this appliance is not suitable for household room illumination. The intended purpose of this lamp is to assist the user to place laundry in the tumble dryer in a comfortable way. The lamps used in this appliance have to withstand extreme physical conditions such as vibrations and temperatures above 50 °C.

5. Preparation

5.1 Laundry suitable for drying in the dryer

Always obey the instructions given on the garment tags. Dry only the laundry having a label stating that they are suitable for drying in a dryer and make sure that you select the appropriate programme.

LAUNDRY DRYING SYMBOLS																				
	Drying Symbols		Suitable for dryer		No Iron		Sensitive / Delicate dry		Do not dry with dryer		Do not dry		Do not dry-clean							
			At any temperature		At high temperature		At medium temperature		At low temperature		Without heating		Hang to dry		Lay to dry		Hang wet to dry		Lay in shadow to dry	
	Iron -					Iron at high temperature		Iron at medium temperature		Iron at low temperature		Do not iron		Iron without steam						
	IRON	Dry or Steam																		
		Maximum temperature			200 °C			150 °C			110 °C									

5.2 Laundry not suitable for drying in the dryer



Delicate embroidered fabrics, woolen, silk garments, delicate and valuable fabrics, airtight items and tulle curtains are not suitable for machine drying.

5.3 Preparing laundry for drying

 
- Laundry may be tangled with each other after washing. Separate the laundry items before placing them into the dryer.
- Dry garments having metal accessories such as zippers, inside out.

- Fasten the zippers, hooks and buckles and button sheets.

5.4 Things to be done for energy saving


Following information will help you use the dryer in an ecological and energy-efficient manner.

- Spin your laundry at the highest speed possible when washing them. Thus, the drying time is shortened and energy consumption is reduced.
- Sort out the laundry depending on their type and thickness. Dry the same type of laundry together. For example thin kitchen towels and table clothes dries earlier than thick bathroom towels.

- Follow the instructions in the user manual for programme selection.
- Do not open the loading door of the machine during drying unless necessary. If you must certainly open the loading door, do not to keep it open for a long time.
- Do not add wet laundry while the dryer is in operation
- Clean the lint filter before or after each drying cycle. **(See 7.1 Lint Filter / Loading Door Inner Surface)**
- Clean the filter periodically when there is visible air collection on it or when the symbol lights up, if there is a filter drawer cleaning warning symbol “” available. **(See 7.4 Cleaning the filter drawer)**
- Ventilate the room, where the dryer is located, well during drying.

5.5 Correct load capacity

Follow the instructions in the “Programme selection and consumption table”. Do not load more than the capacity values stated in the table.

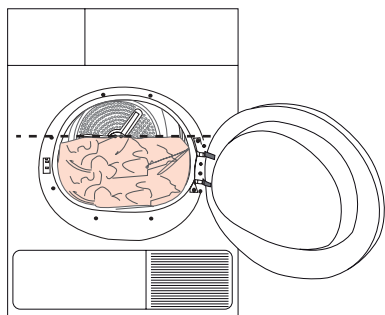

It is not recommended to load the dryer with laundry exceeding the level indicated in the figure. Drying performance will degrade when the machine is overloaded. Furthermore, dryer and the laundry can get damaged.


Following weights are given as examples.

Laundry	Approximate weights (g)*
Cotton quit covers (double)	1500
Cotton quit covers (single)	1000
Bed sheets (double)	500
Bed sheets (single)	350
Large tablecloths	700
Small tablecloths	250
Tea napkins	100
Bath towels	700
Hand towels	350
Blouses	150
Cotton shirts	300
Shirts	250
Cotton dresses	500
Dresses	350
Jeans	700
Handkerchiefs (10 pieces)	100
T-Shirts	125

*Dry laundry weight before washing.

6. Operating your machine

6.1 Control Panel

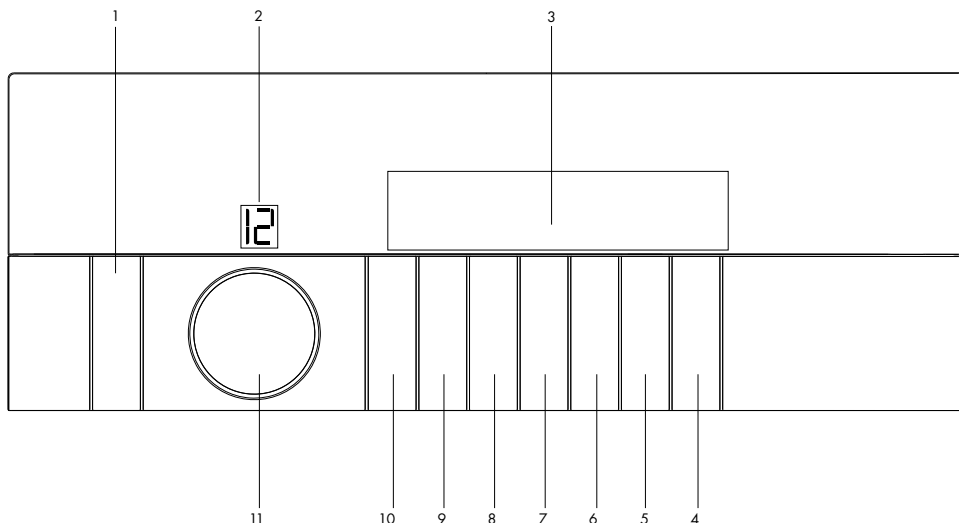

1. On/Off/Cancel button
2. Program Number Indicator
3. Display
4. Start/Stand-by Button
5. Delay Setting Selection Button
6. Wrinkle Prevention Selection Button / Menu Entry Button
7. Dryness Level Setting Selection Button
8. HomeWhiz Button
9. Fast Drying / Child Lock Buttons
10. Timing Schedules Selection Button
11. Program Selection Button

6.2 Screen symbols

<p>The screenshot shows the control panel display with the text 'Cotton Cupboard Dry' at the top. Below it are several icons: a lock, a filter drawer, a filter, a water tank, a HomeWhiz symbol, and a start/pause symbol. To the right of these icons is a digital display showing '88:88'. Below the icons is a row of seven small rectangular indicators.</p>	<p>Cotton Cupboard Dry</p> <p>2:25</p> <p>Filter drawer cleaning warning symbol</p> <p>Filter cleaning warning symbol</p> <p>WLAN symbol</p> <p>Anti-Creasing symbol</p> <p>Child-proof lock warning symbol</p> <p>Water tank warning symbol</p> <p>End time setting symbol</p> <p>HomeWhiz symbol</p> <p>Start/pause symbol</p>	<p>Display info line</p> <p>Remaining time indicator*</p> <p>Filter drawer cleaning warning symbol</p> <p>Filter cleaning warning symbol</p> <p>WLAN symbol</p> <p>Anti-Creasing symbol</p> <p>Child-proof lock warning symbol</p> <p>Water tank warning symbol</p> <p>End time setting symbol</p> <p>HomeWhiz symbol</p> <p>Start/pause symbol</p>
---	--	---

*Time that appears on display indicates the remaining time until the end of the programme and changes according to the dampness level of the laundry and model of the dryer

6.3 Preparing the Machine

Plug the machine.

Place laundry into the machine. Press On/Off/Cancel button for 1 second (long).

When your machine is turned on for the first time, it turns on with the declaration program (cotton wardrobe dry).



Pressing **On/Off/Cancel** button does not mean that the program has started. Press the Start / Stand-by button to start the program.

6.4 Program selection

Determine the suitable program from the table below where drying levels are presented.

Use the Program Selection button to select the program you wish.

Extra Dry	Only cotton clothes are dried under normal temperature. Thick and multi-layered laundry (towels, bed sheets, denim trousers etc.) are dried so that they can be placed in wardrobe without ironing.
Wardrobe Dry	Normal laundry (tablecloths, underwear etc.) are dried so that they can be placed in wardrobe without ironing.
Iron Dry	Normal laundry (shirts, dresses etc.) are dried to be ready for ironing.



For detailed program information, see "Program selection and consumption chart"..

6.5 Main programs

The following main programs are available depending on fabric type.

• Cotton

Dry durable laundry with this program. It dried under normal temperature. It is recommended for your cotton laundry (bedsheets, bedding, towel, bathrobe etc.)

• Synthetic

Dry sensitive laundry with this program. It is recommended for your synthetic laundry.

6.6 Additional programs

The following additional programs are available in the machine for special situations.



Additional programs may vary depending on the features of your machine.

• Bedding

Dry fibre quilts with a label that indicates it can be dried in drying machine. Load the quilt correctly to prevent damage to the machine and the quilt. Remove the quilt cover before loading the quilt to the machine. Load the quilt to the machine after folding it in two.

- Do not load more than 1 double size fibre quilt (200x200 cm). Do not dry items that contain cotton material such as quilts, pillows etc.
- Do not dry items other than quilts such as carpets, rugs, hall rugs etc. This may cause permanent damage to your machine.



To get better results from drying machine programs, your laundry should be washed with suitable program in your washing machine and wrung with recommended wringing speed.

- **Shirt**

Dries shirts more delicately and causes less wrinkles for easy ironing.



Shirt might remain slightly damp at the end of the program. It is recommended not to leave the shirts inside the drying machine.

- **Jeans**

Use to dry denim clothes wrung in the washing machine with high speed.

- **Mix**

Use to dry synthetic and cotton clothes that don't give out colour together.

- **Sportswear**

Use to dry clothes made out of synthetic, cotton or mixed fabrics.

- **Night**

Lowest level of noise and sound is emitted to the operating environment with this program. Sound level is half of the cotton wardrobe dry program.

- **Wool protect**

Use this program to dry wool clothes with a phrase that indicates it can be dried in drying machine on its label for wool products that can be washed in the washing machine.



APPAREL CARE

The wool drying cycle of this machine has been approved by The Woolmark Company for the drying of machine washable wool products provided that the products are washed and dried according to the instructions on the garment label and those issued by the manufacturer of this machine. M1713."The Woolmark symbol is a Certification mark in many countries.

- **Daily**

The program used for daily drying of cotton and synthetic clothes and that takes a period of 100 minutes.

- **Delicates**

You can dry your delicate clothes suitable for drying or clothes that are recommended for hand wash (silk blouses, thin underwear etc.) under low temperatures.



It is recommended to dry your delicates in a laundry bag to prevent wrinkles and damage. When the program ends, take out your laundry immediately and hang them to prevent wrinkles.

- **Freshen up**

Ventilates for 10 minutes without blowing hot air. You can ventilate the cotton and linen clothes that have been enclosed for a long time with this program to remove their odour.






- **Timer programs**

You may select 10 min, 20 min, 30 min, 40 min, 50 min, 60 min, 80 min, 100 min, 120 min, 140 min ve 160 min Timer programs to achieve the required end drying level at low temperatures.



In this program, the machine dries for the duration set, regardless of the drying level.

6.7 Program selection and consumption chart

Programme	Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Durée de séchage (minutes)	RapiDry (minutes)
Cottons / Coloreds					
 Extra dry	8	1000	% 60	175	130
 Cupboard dry	8 / 4	1000	% 60	152 / 95	115
 Iron dry	8	1000	% 60	124	95
Night	8	1000	% 60	240	85
Shirts	1,5	1200	% 50	50	35
Jeans	4	1200	% 50	117	85
Bedding	2,5	1000	% 40	120	-
Mix	4	1000	% 60	110	75
Sportswear	4	1000	% 60	105	70
Daily	1,5	600	% 100	100	65
Delicates	1	800	% 50	50	-
Wool Protect	1,5	600	% 50	146	-
Synthetics					
 Cupboard dry	4	800	% 40	75	50
 Iron dry	4	800	% 40	59	34
Energy consumption values					
Programme	Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Energy consumption value kWh	RapiDry (kWh)
Cottons linen Ready to wear*	8 / 4	1000	% 60	1,42 / 0,83	2,33
Cottons Ready to iron	8	1000	% 60	1,15	1,99
Synthetics Ready to wear	4	800	% 40	0,51	0,87
Power consumption of the off-mode for the standart cotton programme at full load, PO (W)					0,4
Power consumption of the left-on mode for the standart cotton programme at full load, PL (W)					1,0
Contains fluorinated greenhouse gases covered by the Kyoto Protocol. Hermetically sealed. R134a / 0,52 kg - GWP:1430 - 0,744 tCO2e					



„Cotton cupboard dry programme“ used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.

* : Energy Label standard program (EN 61121:2012)

**All the values on the chart are identified according to EN 61121:2012 standard. Consumption values may vary from the valued in the chart depending on laundry type, wringing speed, ambient conditions and voltage levels. The consumption values apply when wireless network connection is turned off.




6.8 Auxiliary functions

Dryness settings selection

With the Dryness settings button is used for adjusting to desired dryness. Program time may change depending on the selection.







You can activate this function only prior to start of program.

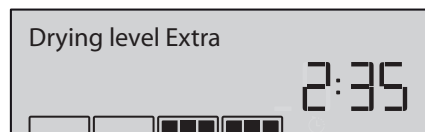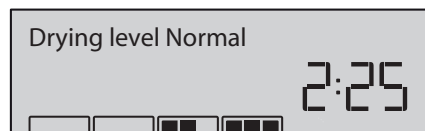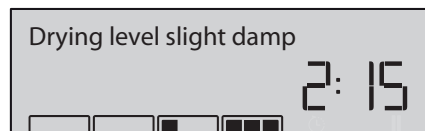

Wrinkle prevention selection


With the **wrinkle prevention** selection button, it is possible to change the period of wrinkle prevention program. If you will not take the laundry out immediately after the program has completed, you may use Wrinkle prevention function to prevent wrinkling of your laundry. This program rotates the laundry every 240 seconds for the selected period, and thus prevents wrinkling. Level changes are specified in the following pictures.

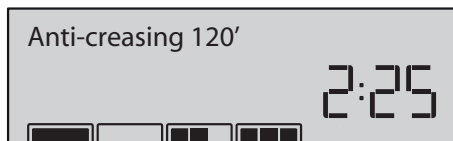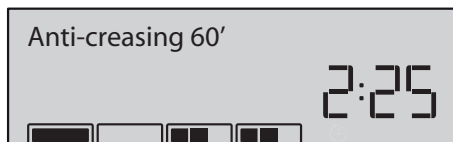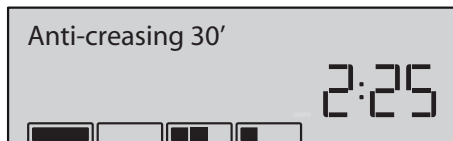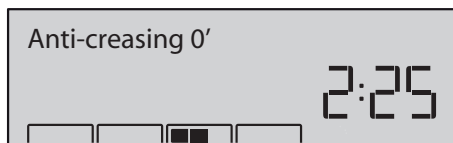

Press **Wrinkle Prevention** to activate this function.



If Wrinkle Prevention function is active, Wrinkle Prevention symbol is illuminated at the end of the program.

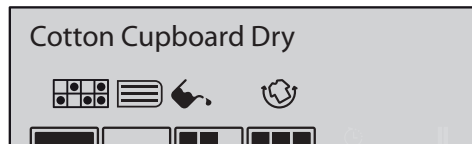

Menu entry button


You may enter the settings menu by pressing the key shown for 3 seconds.




The Settings menu allows you to adjust the operating language, display brightness, audio warning level, spin cycle and wireless network settings.




During the 3 seconds while the button is pressed, Settings 3, Settings 2 and Settings 1 are displayed on the screen, and then you enter the menu. Language Selection menu is displayed first when you enter the menu. To move the previous and next options in the menu, **Speed** and **dryness level selection** buttons are used respectively.

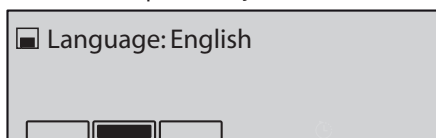

To change the language, press **HomeWhiz** button. Save Settings warning is displayed when you press menu entry button for 3 seconds to save the settings.

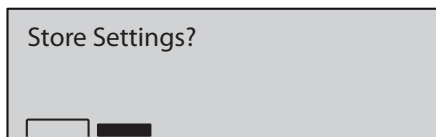

You may save the changes made when you press **HomeWhiz** button on the save settings screen. When you press Fast button, you return to the program selection screen without saving the changes made.

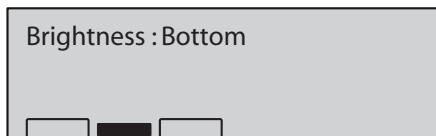


You may select Lower, Upper 1 and Upper 2 brightness levels by pressing the HomeWhiz button on the brightness setting menu. When the program is completed with audio warning level setting menu, an error occurs etc. the level of audio warning is set.




You can change the sound level before the program starts or while the program continues.

In this step, HomeWhiz button is pressed to select low and loud audio warning levels.

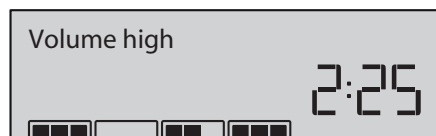


With the speed spin setting menu, you may change the program period of the drying machine by the spin speed setting used in washing machine. For example, spin speed defined for cotton wardrobe dry program is 1000 rpm. The screen period for this spin speed value is 145 minutes. User may reduce the program period to 135 minutes with the higher spin speed of 1200 rpm.

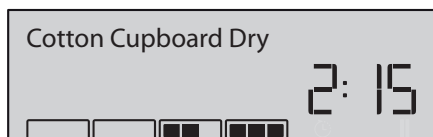

You may change the spin speed as "Spin 1200", "Spin 1400", etc. by pressing **HomeWhiz** button. Drying machine automatically updates the program period after you have changed the spin speed.

Reset to factory settings button is used for returning the changes you have made to the factory settings. Press the **HomeWhiz** button in this menu. Save Settings warning is displayed, when you press HomeWhiz button again, machine is reset to factory settings and exit the menu.

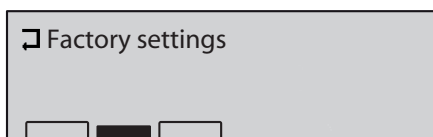



i When you are at any step in the setting menu, press the menu entry button for 3 seconds to exit the menu and return to the program selection screen.

6.9 Fast Drying

You can shorten the drying time of your clothes with the fast drying feature. This feature is available on all programs highlighted in blue on the control panel.

"Fast" button  is used to activate.

For example, the time required for drying in the Cotton Cupboard Setup program drops from 2:32 to 1:55 when this feature is enabled.

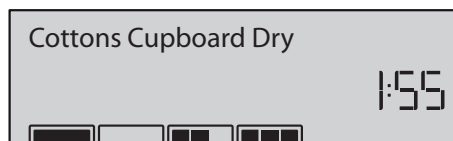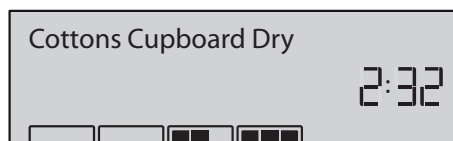

6.10 Warning symbols



 
Warning symbols may vary depending on the model of your machine.

Fibre filter cleaning

When the program is completed, the warning symbol for filter cleaning turns on.



Refer to "Troubleshooting" section if filter cleaning symbol constantly flashes.



Water tank

When the program is completed, the warning symbol to empty the water tank turns on.

If the water tank fills up while the program continues, the warning symbol starts flashing and the machine goes into stand-by. In this case, empty the water tank and start the program by pressing the **Start / Stand-by** button. Warning symbol turns off and program resumes.





Cleaning the filter drawer

Warning symbol flashes periodically to remind that filter drawer must be cleaned.



Loading cover is open

Following warnings are displayed respectively if the loading cover of the drying machine is open.

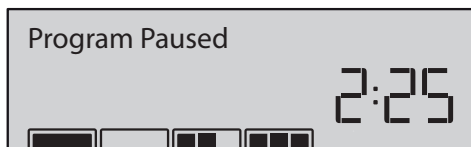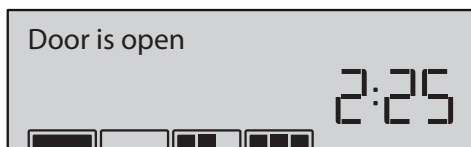

Delay Setting

You can delay the end time of the program up to 24 hours with the **Delay Setting** function.



Open the loading door and place the laundry.

Select drying program, spin cycle and if needed, additional functions.

Press the Delay Setting selection button and set the delay time you wish. **Delay Setting** symbol turns on. (When the button is pressed and hold pressed, **Delay Setting** proceeds non-stop).

Press the **Start / Stand-by** button.

Delay Setting countdown starts and Delay Activated and Program Started messages are displayed on the screen. ":" Separator in the middle of displayed delay time flashes.

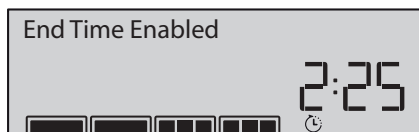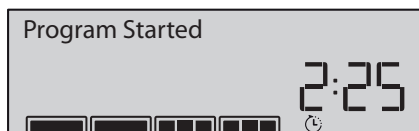

You can add or remove laundry within delay time. Delay Setting symbol will turn off at the end of countdown, drying starts and duration of program is displayed. Displayed time is the sum of normal drying time and delay time.

Changing the delay time

If you want to change the duration during the countdown: Press the **On/Off/Cancel** button for 3 seconds to cancel the program. Turn on the machine again and repeat the Delay Setting process for the duration you wish.

When your machine is turned on for the first time, it turns on with the declaration program (cotton wardrobe dry).

Cancelling the Delay Setting function

If you want to cancel the Delay Setting countdown and start the program immediately: Press the **On/Off/Cancel** button for 3 seconds to cancel the program.

Press the **On/Off/Cancel** button to start you previously selected program.

6.11 Starting the program

Press the Start/Stand-by button to start the program.

Indicating start of the program, **Start** ► sembolü yanar, kalan sürenin ortasındaki “:” işareti yanıp sönmeye devam eder. Ekranda kurutuyor ve program ilerleme çubuğu dönüşümlü yanar.

6.12 Program progress status



6.13 Child Lock

The machine has a child lock which prevents the program flow from being interrupted when the buttons are pressed during a program. When the child lock is activated, all buttons on the panel except the **On/Off/Cancel** button are deactivated.

To activate the child lock, keep **Fast / Child lock** buttons pressed for 3 seconds.

The child lock has to be deactivated to be able to start a new program after the current program is finished or to be able to interfere with the program. **To deactivate the child lock**, keep the same buttons pressed for 3 seconds.



When the child lock is activated, the lock symbol on the screen turns on.



Child lock deactivates when the machine is turned off and on by the On/Off/Cancel button.



Child Lock can not be used when **HomeWhiz** function is activated.

When the child lock is active: The machine runs, or in stand-by state the indicator symbols won't change upon changing the position of the program selection button.

6.14 Changing the program after it is started

You can change the program you selected to dry your laundry with a different program after the machine starts running.

For example, to select Extra Dry instead of Iron Dry, pause the program by pressing the **Start / Stand-by** button.

Select the Extra Dry program using the **Program Selection** button.

Press the **Start/Stand-by** button to start the program.

Adding and removing clothes during stand-by

If you want to add or remove clothes to/from the machine after the drying program starts:

Press the **Start/Stand-by** button to put the machine in Stand-by state.

The drying operation stops.

Open the loading door while in Stand-by state, and close the door after you remove or add laundry.

Press the **Start/Stand-by** button to start the program



Adding laundry after the drying operation starts may cause the dried laundry inside the machine to mix with wet laundry and leave the laundry damp at the end of operation.



Adding or removing laundry during drying may be repeated as many times as you wish. But this operation continuously interrupts the drying operation, and thus increases program duration and energy consumption. So, it is recommended to add laundry before the program starts.



If a new program is selected by turning the program selection knob while the machine is in stand-by; the running program terminates and new program information is displayed on the screen.



Do not touch the inner surface of the drum while adding or removing clothes during a continuing program. The drum surface is hot.

6.15 Cancelling the program

If you want to cancel the program and terminate the drying operation for any reason after the machine starts running, keep the **On/Off/Cancel** button pressed for 3 seconds.




The inside of the machine shall be extremely hot when you cancel the program during machine operation, so run the ventilation program to allow it to cool down.

6.16 End of program

When the program has ended, Fibre Filter Cleaning and Water Tank warning symbols are illuminated on the program monitoring indicator and "**Program Ended**" message is displayed on the screen. Loading cover can be opened and machine is ready for another operation.

To turn off the machine, press the **On/Off/Cancel** button.

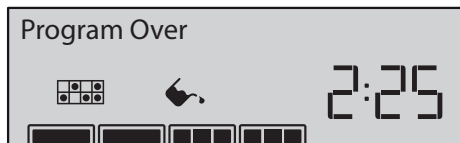

Wrinkle Prevention

function activates the 2-hour (varies as per selection) Wrinkle Prevention program if Wrinkle Prevention is active and laundry isn't taken out of machine after completion of the program.




Clean the fibre filter after each drying. (See "Fibre filter and Loading door inner surface")














Empty the water tank after each drying. (See "Emptying the water tank")

6.17 Drying Rack

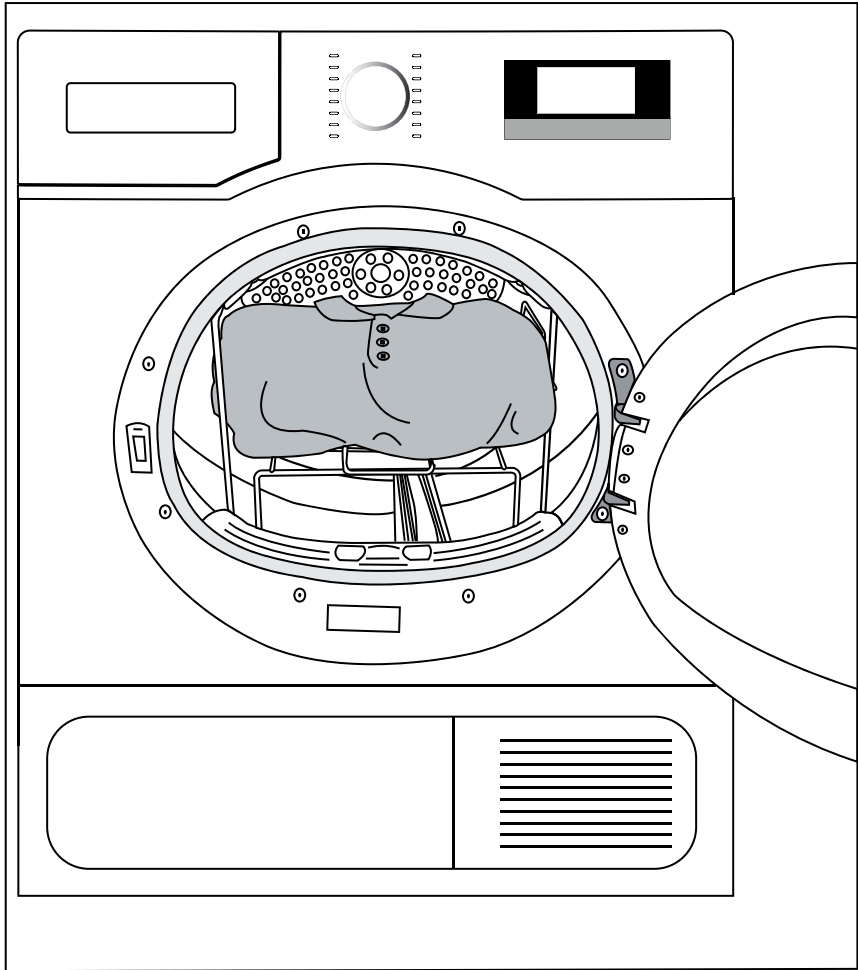

General Appearance of the Basket

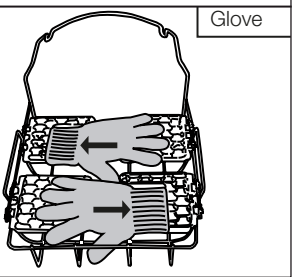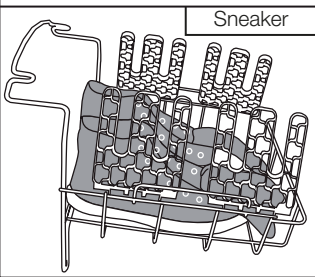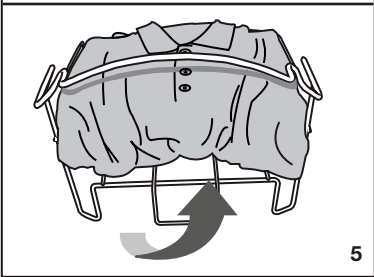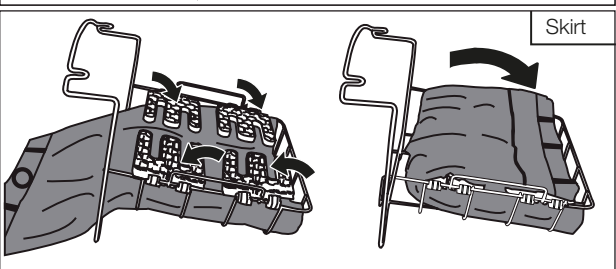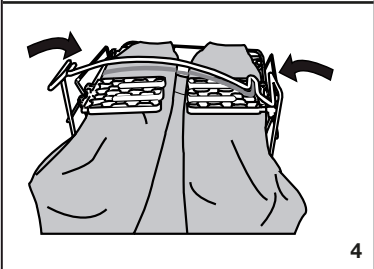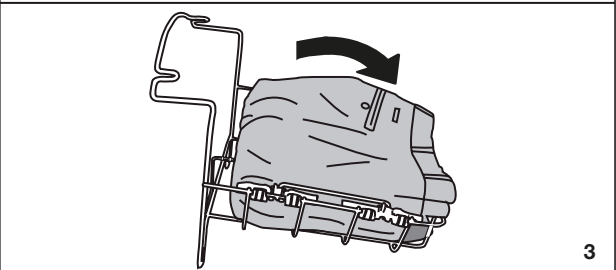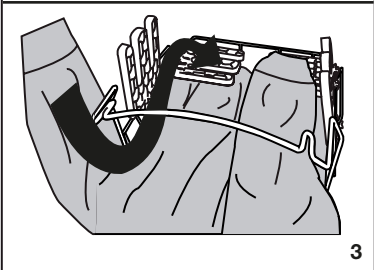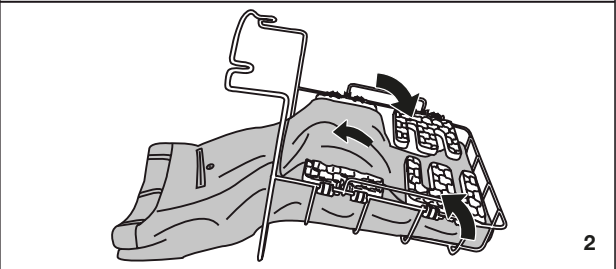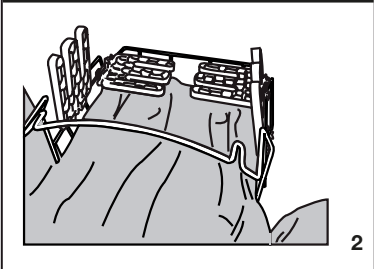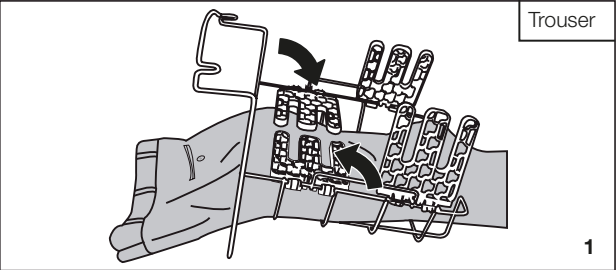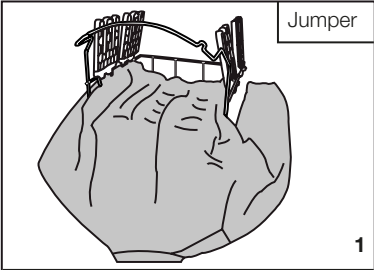

Placing the Basket in the Basket:

Wool Program in the Basket:

Wool Program in Basket allows you to dry your pants, skirts, wool sweaters and sneakers without spinning in the drum thanks to a racked basket that is placed in the drum.



In your device, Wool Program in the Basket and Timer programs are paired. Based on your needs, you can use with or without a basket. The descriptions and warnings are based on the assumption that you are using a basket.



Do not initiate the wool program in the basket without placing the basket in the drum.



Use the racked basket only for wool program in the basket program; do not use for other programs.



Before placing the sneakers inside the basket, place the racked basket in the machine and open the racks.

In the laundry placement in the basket section, sweaters, pants, skirts, sneakers and gloves placement are described. Before placing the sneakers in the basket, move the sneaker flaps out and take the shoelaces away. Place the gloves through their wrist sections on the racks as shown in the figure. Select the wool program in the basket via the program button. By using the program duration button on the control panel, the desired duration can be adjusted up to 160 minutes.


Placing the Basket in the Machine:



After placing the laundry in the basket, place the basket in the machine.



Before placing the basket in the machine and remove it from the machine, detach the racks on the basket.

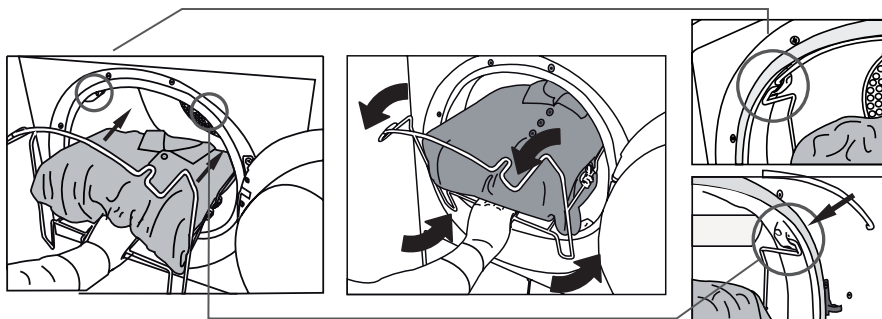

1 - Insert the basket in the machine with the lower section of the basket going in the machine first.

2 - Attach the basket to the machine via the two sockets.

Recommended Loads and Drying Durations:

The provided rates are guidance rates.


If required, initiate additional drying.

Recommended Loads and Drying Durations:

The provided rates are guidance rates.


If required, initiate additional drying.

Load Type	Programme duration (min.)
Wool Sweater	120 - 140
Pants	140 - 160
Accessories such as gloves	60 - 80
Skirts	100 - 120
Sneakers (max. 1 kg)	120 - 140

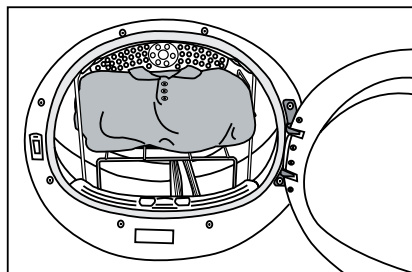

3 – General view of the basket in the machine.

7 HomeWhiz function


 **HomeWhiz** function allows you to remotely control and monitor your machine with your smart device. With **HomeWhiz** app you can download your smart device from the application store, you can remotely control your machine and choose the program you want; Quick drying, drying level, spin cycle selection in the washing machine, creasing prevention time, and start and stop the program. You may also perform the language, brightness and volume settings on the settings menu of your machine with the smart device. In addition to these features, you may monitor the current status of your machine and the drying time, Tank full and Door open warnings from the application.

7.1 HomeWhiz Setup and Wireless Network Connection Setting


Download the HomeWhiz application required to use the HomeWhiz function from the application store of your smart device. To use HomeWhiz function, you need to sign up for the application with your e-mail address and do HomeWhiz set up of your machine.

Initial Setup:

- 1 Open **HomeWhiz** app that you have downloaded to your smart device. If you don't have a membership, sign up and log in with your user account as the app will direct you.
2. Select "add / remove product" on the application homepage, and then "touch here to connect the product to the network".
3. Go to the settings menu by pressing the Anti-Wrinkle / Menu entry button for 3 seconds as the application directs you.

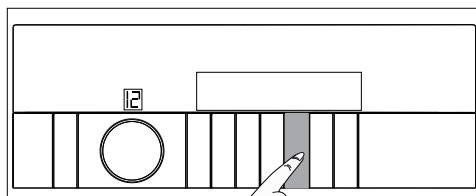

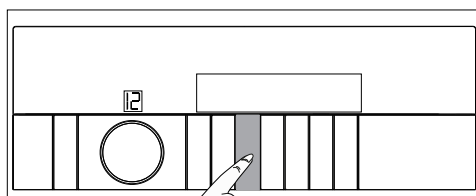

4. When you go to the Settings menu, Find **HomeWhiz** Setup using the keys to the right and left of **HomeWhiz** key.
5. Activate **HomeWhiz** Setup by pressing **HomeWhiz** button. Your machine will display "**HomeWhiz** Setup: On" on your screen.




6. Continue setup as the application guide you. In this step your machine shall connect to your wireless network and pair with your application membership.





During setup, you need to connect firstly your smart device to the network "**HomeWhiz-Dryer-xxxx**" and then connect your machine to the network where you will connect your machine. Once setup is done, you can use HomeWhiz app via any other wireless network or Internet connection over the mobile network.

7. While establishing a connection, the connection symbol  flash and "Connecting ..." appear on the screen. When the connection is established, the connection symbol  is lit up continuously and "Connected" appears on the screen.
8. When you have completed the setup, you can exit the settings menu by pressing the Anti-creasing / Menu entry button for 3 seconds.

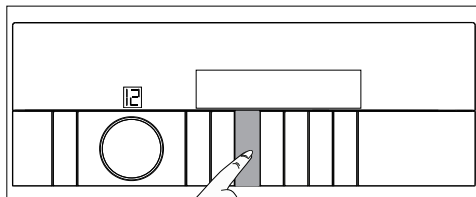3. You can turn it on and off by pressing **HomeWhiz** button.



The  symbol on the screen indicates wireless connection status.

Your machine  is connected to the network when xxx is on; it is being connected when the symbol is flashing and not connected when the symbol is off.




Repeat the initial setup steps if the wireless network name or password changes.


Wireless Network Connection Setting:

You can turn the wireless network connection of your HomeWhiz-installed machine on or off without having to re-install it.

1. Enter the settings menu.

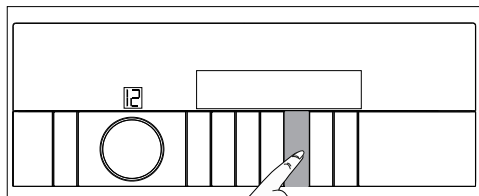

2. Find "**Wireless Connection**" by using the buttons to the right and left of HomeWhiz.

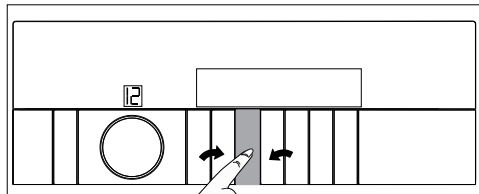

When "Wireless Connection: On" on your machine, **HomeWhiz** function can be selected. Check the network connection status if it is not possible to select **HomeWhiz** function. If connection is not established, repeat the initial setup settings over the machine.



If the wireless network name or password of your machine changes, repeat the initial setup steps.

7.2 Usage of HomeWhiz Function:

To remotely control your **HomeWhiz** setup, Ensure that your machine is turned on and the door is closed and you must activate the function by pressing the HomeWhiz button. As long as **HomeWhiz** function is enabled, you can use all the settings and operations you can perform via the control panel of your machine via HomeWhiz application.

You can understand whether **HomeWhiz** function is on / off or adjustable / not adjustable by framing **HomeWhiz** button on the screen. If there is no frame, **HomeWhiz** function can not be set. If there is a frame but it is empty, **HomeWhiz** function can be set but it is not activated. If the frame is full, the **HomeWhiz** function is activated. **HomeWhiz** function is automatically disabled in the following situations:

- Open door
- Pressing **HomeWhiz** button again
- Closing the machine via control panel
- Power outage or unplugging your machine

When **Home Whiz** function is disabled, you can continue monitoring the status of your machine through the application. HomeWhiz function needs to be reactivated to be checked.



If you can not activate **HomeWhiz** function (no frame), ensure that the wireless connection setting is turned on and that the machine cover is closed.

Your machine sends you notifications via **HomeWhiz** app when the following occurs. You can set where you want to receive these notifications from the settings page of your machine.

1. Completing program
2. Opening the door of your machine
3. Filling the water tank
4. Filter control warning
5. Running and stopping of Anti-crease function



For the **HomeWhiz** function to be usable, HomeWhiz application shall be installed on your smart device and activated internet connection of your machine shall be connected to a wireless network. When your machine is not connected to the network, your machine operates like a machine without HomeWhiz function.



All safety precautions described in “Important safety and environmental precautions” also apply for remote control and monitoring with the **HomeWhiz** function.



When you want to pause your machine with the application while the **HomeWhiz** function is active, the temperature of the laundry is checked and program is not paused until a proper temperature is reached. “Your laundry is being cooled” on the screen. Program is paused when the laundry is cooled adequately.

You can use the **HomeWhiz** function on more than one smart device. You need to download the **HomeWhiz** application from the application store of the devices you want to use for each of the smart devices you want to use, and you have to log in with the membership details (your email address and the password you specify) you used before.

Using the HomeWhiz function on a machine connected to another user account

If the machine you want to use the HomeWhiz function is linked to another user account, you can also follow the steps below to pair the machine account with a different account.

1. Ensure that your your smart device and machine are connected to the same network.
2. If you do not have an account, open the HomeWhiz application you downloaded from your smartphone application store and follow the instructions to create a new account.
3. Log in to your account and touch "Add / Remove Product". Products that have all HomeWhiz functions available on the wireless network you are connected is listed. Find the machine you want to use and then touch the + sign
4. After giving a name you like to the machine, the user who owns the machine shall be asked to use the machine. The owner of the machine may approve or deny your request from the link to the user's e-mail address or from the machine's "user association settings" page of the application's settings page.



You can also request the ownership of the machine from the "user association settings" section of the machine's settings page.

Deleting HomeWhiz pairing

If you do not remember your membership password or you want to cancel the ownership of the machine for any reason, you can delete your machine's **HomeWhiz** pairing by following the steps below.

1. Enter the settings menu.
2. Use the buttons to the right and left of **HomeWhiz** button to find "Delete **HomeWhiz** pairing".
3. You can start deleting process by pressing **HomeWhiz** button.
4. If you are sure about deleting **HomeWhiz** pairing of your machine, you can initiate the process by pressing HomeWhiz again. Or you can cancel it by pressing the Fast key. In the case of starting the deleting process, the screen will first show "Deleting" and then "Deleted"



In case of writing "Unable to delete"" ensure that your machine's wireless network connection is On and the internet connection is activated and then try again.



After deleting **HomeWhiz** pairing, you need to repeat the setup steps to use **HomeWhiz** function of the machine.

7.3 Troubleshooting

Follow the steps below if you have a problem with remote control / monitoring or connection.

1. Ensure that your smart device is connected to the internet.
2. Close and reopen **HomeWhiz** app.
3. Disable the wireless connection setting, enable it again, and reconnect to your machine through the application.
4. If you still can not connect to your machine, repeat the setup steps from the beginning.

Observe whether the problem is resolved. If the problem persists, contact the dealer or Authorized Service Center where you purchased your machine.

8. Maintenance and cleaning

Service life of product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

8.1 Cleaning Lint Filter / Loading Door Inner Surface

Lint and fiber released from the laundry to the air during the drying cycle are collected in the Lint Filter.



Such fiber and lint are generally formed during wearing and washing.




Always clean the lint filter and the inner surfaces of the loading door after each drying process.



You can clean the lint filter housing with a vacuum cleaner.




- A layer can build up on the filter pores that can cause clogging of the filter after using the dryer for a while. Wash the lint filter with warm water to remove the layer that builds up on the lint filter surface. Dry the lint filter completely before reinstalling it.

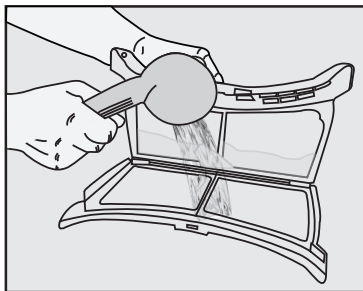

- Clean the entire inner surface of the loading door and loading door gasket with a soft damp cloth.

To clean the lint filter:

- Open the loading door.
- Remove the lint filter by pulling it up and open the lint filter.
- Clean lint, fiber, and cotton raveling by hand or with a soft piece of cloth.
- Close the lint filter and place it back into its housing.

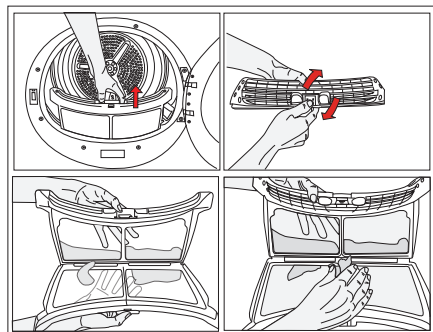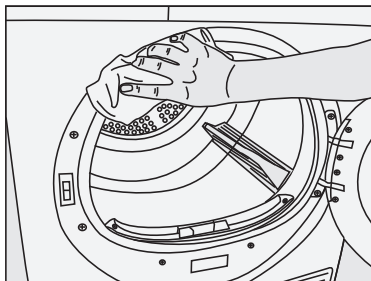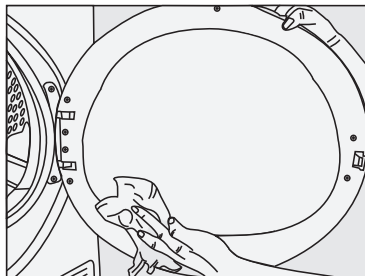

8.2 Cleaning the sensor

There are dampness sensors in the dryer that detect whether the laundry is dry or not.

To clean the sensors:

- Open the loading door of the dryer.
- Allow the machine to cool down if it is still hot due to the drying process.
- Wipe the metal surfaces of the sensor with a soft cloth, dampened with vinegar and dry them.




Clean metal surfaces of the sensors 4 times a year.



Do not use metal tools when cleaning metal surfaces of the sensors.



Never use solvents, cleaning agents or similar substances for cleaning due to the risk of fire and explosion!

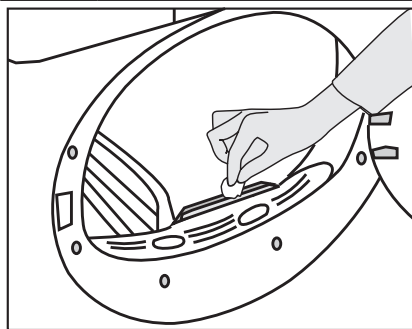

8.3 Draining the water tank

Dampness of the laundry is removed and condensed during drying process and the water that arise accumulates in the water tank. Drain the water tank after each drying cycle.



Condensed water is not drinkable!




Never remove the water tank when the program is running!


If you forget to drain the water tank, the machine will stop during the subsequent drying cycles when the water tank is full and the Water Tank warning symbol will flash. If this is the case, drain the water tank and press **Start / Pause** button to resume the drying cycle.

To drain the water tank:

Pull the drawer and remove the water tank carefully.

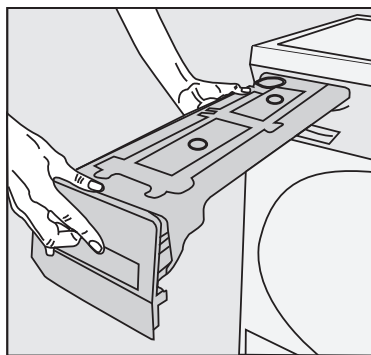

- Drain the water in the tank.

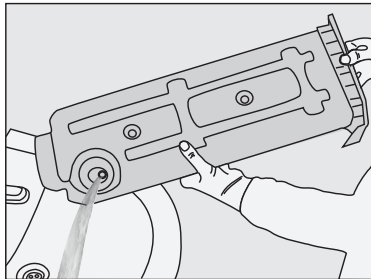

- If there is lint accumulation in the funnel of the water tank, clean it under running water.
- Place the water tank into its seat.



If the direct water draining is used as an option, there is no need to empty the water tank.


8.4 Cleaning the filter drawer

Lint and fiber that could not be captured by the lint filter are blocked in the filter drawer behind the kick plate. Clean the filter periodically when there is visible air collection on it or when the symbol lights up, if there is a filter drawer cleaning warning symbol "≡" available.


There is an one stage filter. This one stage filter is from sponge

To clean the filter drawer:


- Press the kick plate button to open the kick plate.

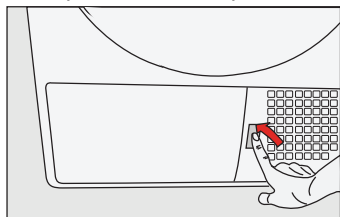


- Remove the filter drawer cover by turning it in the direction of arrow.

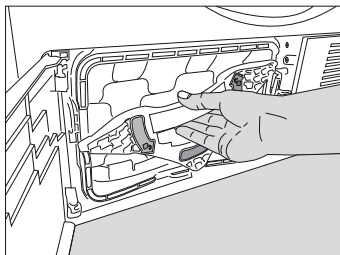


- Pull out the filter drawer.

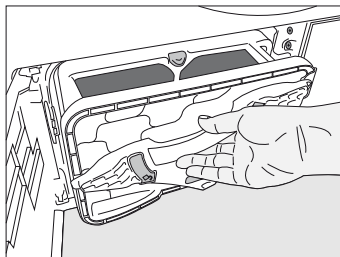

- Open the filter drawer by pressing the red button.

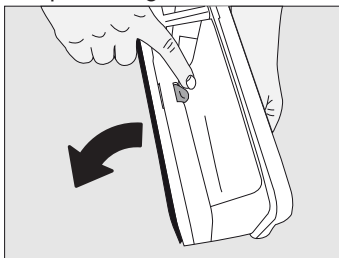

- Take out the filter drawer sponge.

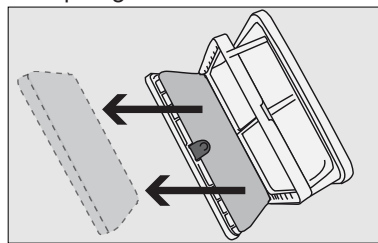


- Wash the filter drawer sponge by hand to remove the fiber and lint on the surface. After washing the sponge, squeeze it by hand and remove the excess water. Well-dry the sponge before storing it.




It is not necessary to clean the sponge if lint and fiber accumulation on it is not significant.

- Place the sponge back into its place.

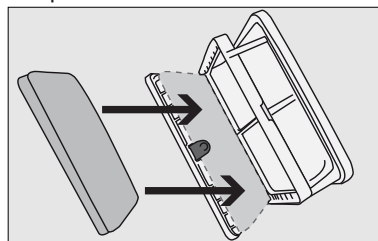





Please place the sponge carefully inside the frame of the filter cassette shown by arrows in order to avoid squeezing when filter drawer closed”.:

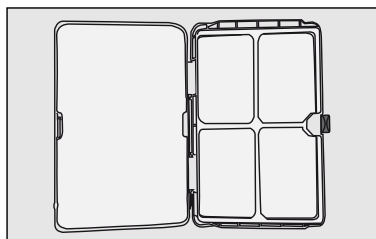


- Close the filter drawer as to lock the red button.

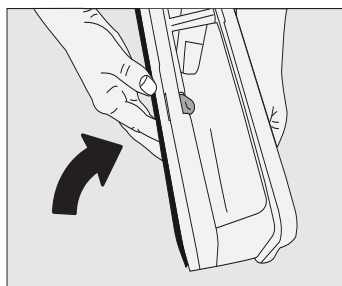

- Place the filter drawer back into its place, turn the filter drawer cover in the arrow direction and close it securely.

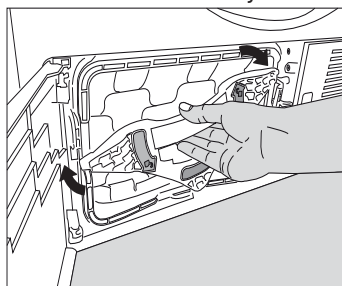

- Close the kick plate cover.

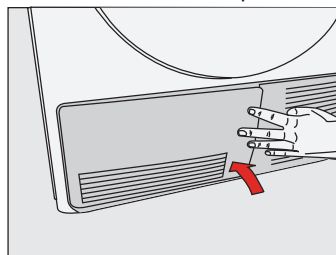



Drying without the filter drawer sponge in place will damage the machine!



A dirty lint filter and filter drawer will cause longer drying periods and higher energy consumption.

8.5 Cleaning the evaporator

Clean the lint accumulated on the fins of the evaporator located behind the filter drawer with a vacuum cleaner.

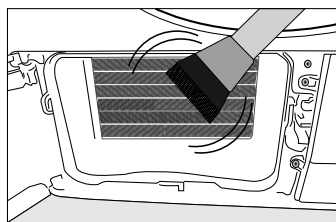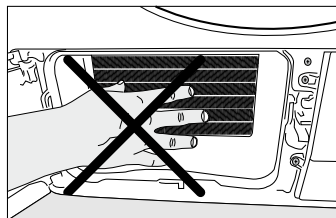

CAUTION: You can also clean by hand provided that you wear protective gloves. Do not clean the evaporator with bare hands. Evaporator fins may hurt your hands.

9. Troubleshooting

Drying process takes too much time.

- Pores of the lint filter are clogged. >>> Wash the lint filter with warm water.
- Filter drawer may be blocked>>>clean the foam inside the filter drawer.
- Ventilation grids on the front side of the machine are blocked. >>> Remove the objects (if any) that block ventilation in front of the ventilation grids.
- Ventilation is not sufficient since the room where the machine is installed is very small. Open the door and window of the room to avoid the room temperature increase too much.
- Lime deposit has built up on the dampness sensor. >>> Clean the dampness sensor.
- Excessive laundry is loaded. >>> Do not load the dryer in excess.
- Laundry is not spun sufficiently. >>> Spin your laundry at a higher speed in your washing machine.

Laundry comes out wet at the end of drying.



After drying, the hot clothes feel damper than their actual dampness level.

- It is likely that the selected programme did not suit the laundry type.>>>Checking the care labels on clothes, select appropriate programme for the laundry type or use timer programmes in addition.
- Pores of the lint filter are clogged. >>> Wash the lint filter with warm water.
- Filter drawer may be blocked>>>clean the foam inside the filter drawer.
- Excessive laundry is loaded. >>> Do not load the dryer in excess.
- Laundry is not spun sufficiently. >>> Spin your laundry at a higher speed in your washing machine.

Dryer does not switch on or the programme does not start. Dryer does not start when it is set.

- It is not plugged in. >>> Make sure that the machine is plugged in.
- The loading door is ajar. >>> Make sure that the loading door is closed securely.
- Programme is not selected or the Start / Pause / Cancel button is not pressed. >>> Make sure that the programme is selected and the machine is not in Pause mode.
- Childproof Lock is activated. >>> Deactivate the Childproof Lock.

Programme is interrupted without any cause.

- Loading door is ajar. >>> Make sure that the loading door is closed securely.
- There was a power failure. >>> Press Start / Pause / Cancel button to start the programme.
- Water tank is full. >>> Drain the water tank.

Laundry has shrunk, become felted or deteriorated.	
<ul style="list-style-type: none"> A programme suitable for the laundry type is not used. >>> Check the garment tag and select a programme suitable for the fabric type. 	
Drum lighting does not turn on. (On models with lamp)	
<ul style="list-style-type: none"> Dryer is not switched on with the On / Off button. >>> Make sure that the dryer is switched on. Lamp is defective. >>> Call Authorized Service Agent to have the lamp replaced. 	
End/Anti-creasing symbol is on.	
<ul style="list-style-type: none"> Anti-creasing programme is activated in order to prevent laundry that has remained in the machine from creasing. >>> Turn off the dryer and take out the laundry. 	
End symbol is on.	
<ul style="list-style-type: none"> Programme is over. Turn off the dryer and take out the laundry. 	
Lint Filter Cleaning symbol is on.	
<ul style="list-style-type: none"> Lint filter is not cleaned. >>> Clean the lint filter. 	
Lint Filter Cleaning symbol is flashing.	
<ul style="list-style-type: none"> Filter housing is clogged with lints. >>> Clean the lint filter housing. A deposit has built up on the lint filter pores that may cause clogging. >>> Wash the lint filter with warm water. Filter drawer is clogged. >>> Clean the sponge and the filter cloth in the filter drawer. 	
Water leaks from the loading door	
<ul style="list-style-type: none"> Lint has accumulated on the inner surfaces of the loading door and on the surfaces of the loading door gasket. >>> Clean the inner surfaces of the loading door and the surfaces of the loading door gasket. 	
Loading door opens spontaneously.	
<ul style="list-style-type: none"> Loading door is ajar. >>> Push the loading door to close until you hear a locking sound. 	
Water Tank warning symbol is on/flashing.	
<ul style="list-style-type: none"> Water tank is full. >>> Drain the water tank. Water draining hose is bent. >>> If the product is connected directly to a wastewater drain, check the water drain hose. 	
Filter Drawer Cleaning warning symbol is flashing.	
<ul style="list-style-type: none"> Filter drawer is not cleaned. >>> Clean the sponge and the filter cloth in the filter drawer. 	



If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.



If your machine has the HomeWhiz function, please refer to the HomeWhiz Function Section for troubleshooting of the HomeWhiz function.

10. Electrical Connection

Make sure that you have an earthed power outlet socket rated at 13 amps (minimum).

10.1 Attention!

When installed, the socket must be reachable after installation, or a separate switch (which can disconnect the two poles) must be used in the installation. Check for suitability. For a permanent connection, a master switch with at least 3mm contact clearance and minimum 13 A rating must be used.

10.2 Electrical requirements

Before you insert the plug into the wall socket make sure that the voltage and the frequency shown in the rating label corresponds to your electricity supply. We recommend that this appliance be connected to the mains supply via a suitable switched and fused socket in a readily accessible position. Should the mains lead of the appliance become damaged or need replacing at any time, it must be replaced by a special purpose made mains lead which can only be obtained from an Authorised Service Agent.



Warning

This appliance must be earthed. If the fitted moulded plug is not suitable for your socket, then the plug should be cut off and an appropriate plug fitted.

The moulded plug on this appliance incorporates a 13A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers are available from any good electrical

store.

In order to avoid hazards, damaged supply cord should be replaced by the manufacturer, its service agent or similarly qualified people.

A Do not operate without the top cover fitted. Risk of injury.



Important

10.3 Fitting a different plug


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:

1 Connect the green - yellow or green (earth) wire to the terminal in the plug marked 'E' or with the symbol or coloured green and yellow or green.

2 Connect the blue (neutral) wire to the terminal in the plug marked 'N' or coloured black.

3 Connect the brown (live) wire to the terminal in the plug marked 'L' or coloured red.

With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptor or in the main fuse box. If in doubt contact a qualified electrician.

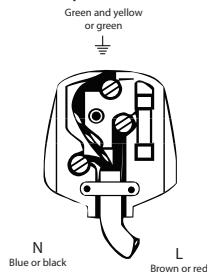

10.4 Washer/dryer combination

Do not stack washing machine on top of the tumble dryer. This would damage both appliances and guarantees would become void. It is also unsafe to stack an appliance on top of another without using a suitable and approved stacking kit obtained from specialist retailers.

PRODUCT FICHE

Complying Commission Delegated Regulation (EU) No 392/2012

Supplier name or trademark		GRUNDIG
Model name		GTN 48267 GCHB
Rated capacity (kg)		8
Type of Tumble Dryer	Air Vented	-
	Condenser	•
Energy efficiency class ⁽¹⁾		A+++
Annual Energy Consumption (kWh) ⁽²⁾		177
Type of Control	Automatic	•
	Non-automatic	-
Energy consumption of the standard cotton programme at full load (kWh)		1,42
Energy consumption of the standard cotton programme at partial load (kWh)		0,83
Power consumption of the off-mode for the standart cotton programme at full load, P ₀ (W)		0,4
Power consumption of the left-on mode for the standart cotton programme at full load, P _L (W)		1,0
The duration of the left on mode (min)		30
Standard cotton programme ⁽³⁾		
Programme time of the standard cotton programme at full load, T _{dry} (min)		152
Programme time of the standard cotton programme at partial load, T _{dry1/2} (min)		95
Weighted programme time of the standard cotton programme at full and partial load (T ₁)		119
Condensation efficiency class ⁽⁴⁾		A
Average condensation efficiency of the standard cotton programme at full load, C _{dry}		91%
Average condensation efficiency of the standard cotton programme at partial load, C _{dry1/2}		91%
Weighted condensation efficiency of the standard cotton programme at full load and partial load, C ₁		91%
Sound power level for the standard cotton programme at full load ⁽⁵⁾		66
Built-in		-

• : Yes - : No

(1) Scale from A+++ (most efficient) to D (least efficient)

(2) Energy consumption based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

(3) "Cotton cupboard dry programme" used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton

(4) Scale from G (lest efficient) to A (most efficient)

(5) Weighted average value — L_{WA} expressed in dB(A) re 1 pW

Guarantee Details

Your new Grundig product is guaranteed against faulty materials, defective components or manufacturing defects. The guarantee starts from the date of original purchase of the product for a period of three (3) years unless Beko plc (the "Manufacturer") agrees to extend the guarantee for the product in writing. If you have any questions about the guarantee on your product (including how long it is valid), please contact your retailer or our Call Centre on 0333 207 9920.

This guarantee does not in any way diminish or affect your statutory rights in connection with the product. This guarantee is in addition to your statutory rights as a consumer. If you have any question about these rights, please contact the retailer from which you purchased the product. In certain circumstances, it is possible that your statutory rights may offer additional or higher levels of protection than those offered under the terms of this guarantee.

What is covered by this guarantee?

- Repairs to the product required as a result of faulty materials, defective components or manufacturing defects.
- Functional replacement parts to repair a product.
- The costs of a Grundig Approved Engineer to carry out the repair.

What is not covered?

- Transit and delivery damage.
- Cabinet or appearance parts, including but not limited to control knobs, flaps and handles.
- Accessories and/or consumable items including but not limited to ice trays, scrapers, cutlery baskets, filters and light bulbs.
- Repairs necessary as a direct or indirect result of:
 - Accidental damage, misuse or abuse of a product.
 - An attempted repair of a product by anyone other than a Grundig Approved Engineer (the "Engineer").
 - Installation or use of a product where such installation or use fails to meet the requirements contained in this guarantee or the User Instructions Booklet.
- Repairs to a product operated at any time on commercial or non-residential household premises (unless we have previously agreed to the installation environment).

This guarantee is limited to the cost of repairing the product. To the extent permitted by law, Beko plc (the "Manufacturer") does not accept and will not be held liable for any financial loss incurred in connection with the failure of any product to operate in accordance with the expected standards. Such financial loss includes but is not limited to loss arising from:

- Time taken off work.
- Damaged food, clothing or other items.
- Meals taken at restaurants or from takeaways.

- General compensation for inconvenience.

Important Notes

- Your product is designed and built for domestic household use only.
- The guarantee will automatically be void if the product is installed or is used in commercial or non-residential domestic household premises, unless we have previously agreed to the installation environment.
- The product must be correctly installed, located and operated in accordance with the instructions contained in the User Instructions Booklet provided with your product.
- Professional installation by a qualified Electrical Domestic Appliance Installer is recommended for all Washing Machines, Dishwashers and Electric Cookers (as incorrect installation may result in you having to pay for the cost of repairing the product).
- Gas Cookers must be professionally installed by a Gas Safe (or Gas Networks Ireland for Republic of Ireland) registered gas installer.
- This guarantee is given in respect of products purchased and used within the United Kingdom and the Republic of Ireland.
- This guarantee is effective from the initial date of purchase of a new product from an authorised retailer and will be void if the product is resold.
- This guarantee does not apply to graded sales (where the product is purchased as a "second").
- Possession of a copy of these terms and conditions does not necessarily mean that a product has the benefit of this guarantee. If you have any questions, please call our Call Centre on the number set out above.
- The Manufacturer reserves the right to terminate the guarantee if its staff or representatives are subjected to physical or verbal abuse in the course of carrying out their duties.
- Optional extras, where available (i.e. extendable feet) are supplied on a chargeable basis only.

Does Grundig offer replacements?

This is a repair-only guarantee. On occasion, the Manufacturer may at its sole discretion, replace your product with a new product instead of carrying out a repair. Where a replacement is offered, this would normally be an identical model, but when this is not possible, a model of similar specification will be provided. The Manufacturer will cover the costs and arrange for the delivery of the new product and for the return of the old product. Any costs related to disconnecting the faulty product and installing the replacement product will not be borne by the Manufacturer unless previously agreed to in writing. The original guarantee will continue to apply to the replacement product; the new product will not come with a new guarantee.

When will the repair take place?

Our Engineers work Monday to Friday 9.00am to 5.00pm. Appointments outside these hours may be possible at the sole discretion of the Manufacturer but cannot be guaranteed. Whilst our Engineers will endeavour to minimize inconvenience and to meet requests for specific timed appointments, this cannot be guaranteed. We will not be liable for delays or if it is unable to carry out a repair because a convenient appointment cannot be arranged.

Will there be any charge for the repairs?

It is your responsibility to provide evidence to the Engineer that your product is covered by this guarantee with a proof of purchase. The Manufacturer reserves the right to charge for the reasonable cost of any service call if:

- You cannot provide evidence that your product is covered by this guarantee.
- Where a service call has been made and the engineer finds that there is no fault with your product.
- That your product has not been installed or operated in accordance with the User Instructions Booklet.
- That the fault was caused by something other than faulty materials, defective components or manufacturing defects.
- For missed appointments.

Payment of these costs are due immediately upon the Engineer providing you with an invoice. The Manufacturer reserves the right to terminate the guarantee if you fail to pay the costs for the service call in a timely manner.

If you are a resident of the United Kingdom, this guarantee will be governed by English law and subject to the English Courts, save where you live in another part of the United Kingdom, in which case the law and courts of that location will apply.

If you are resident in the Republic of Ireland, this guarantee will be governed by Irish law and the Irish courts will have jurisdiction.

HOW TO OBTAIN SERVICE

Please keep your purchase receipt or other proof of purchase in a safe place; you will need to have it should the product require attention under guarantee.

It will be useful if you complete the details below, as it will help us assist you when requesting service (the model number is printed on the Instruction Booklet and the serial number is printed on the Rating Label affixed to the appliance). Recording of these details alone will not count as proof of purchase. A valid proof of purchase is required for under guarantee service.

The area around the product must be easily accessible to the Engineer without the need for cabinets or furniture being removed.

It is your responsibility to ensure our Engineers have a clean and safe environment to carry out any repairs.

.....
Model No:

Serial No:

Retailer:

Date of purchase:
.....

For service under guarantee simply telephone the appropriate number below

UK Mainland & Northern Ireland 0333 207 9920 or customerservice@support.grundig.co.uk

Republic of Ireland: 01 862 3411

Register your appliance at: grundig.co.uk/support/register

 
Before requesting service please check the troubleshooting guide in the Operating Instructions as a charge may be levied where no fault is found even though your product may still be under guarantee.

Service once the manufacturers guarantee has expired

If you have purchased an extended guarantee please refer to the instructions contained within the extended guarantee agreement document, otherwise please call the appropriate number above where service can be obtained at a charge.

Should you experience any difficulty in obtaining service contact the Grundig Customer Helpline on Tel: 0333 207 9920 or e-mail: customerservice@support.grundig.co.uk

.....
This guarantee is provided by Beko plc. Beko House, 1 Greenhill Crescent, Watford, Herts, WD18 8QU. Beko plc is registered in England and Wales with company registration number 02415578.



GRUNDIG

www.grundig.com

Document Number 2960311466_KM/230317.1618